PCI334A

Universal I/O 32-bit PCI Quad
Serial Communications Controller

Hardware Manual

Performance Technologies
205 Indigo Creek Drive
Rochester, NY 14626 USA
585.256.0248
support@pt.com

www.pt.com

© 2009 Performance Technologies, Inc.
All Rights Reserved.

PERFORMANCE TECHNOLOGIES

Document Revision History

Part Number	Date	Explanation of changes
126P0439.10	09/13/03	Initial release
126P0439.11	11/08/04	Updated K7, K8 Switch locations and definitions and new board diagram
126P0439.12	05/24/06	Reformatted
126P0439.20	11/02/09	Reformatted, reorganized, updated cable and RoHS part numbers

Disclaimer

This document presents information for users of Performance Technologies Inc. products. Although the information contained within this document is considered accurate and characteristic of the subject product, Performance Technologies Inc. reserves the right to make changes to this document and any products described herein to improve reliability, functionality, or design. Performance Technologies Inc. does not assume any liability arising out of the application or use of any product or circuit described herein. No part of this document may be copied or reproduced in any form or by any means without the prior permission of Performance Technologies Inc.

Copyright Notice

© Copyright 2009 by Performance Technologies, Inc. All Rights Reserved.

The Performance Technologies logo is a registered trademark of Performance Technologies, Inc. All other product and brand names may be trademarks or registered trademarks of their respective owners.

This document is the sole property of Performance Technologies Inc.

Errors and Omissions

Although diligent efforts are made to supply accurate technical information to the user, occasionally errors and omissions occur in manuals of this type. Refer to the Performance Technologies, Inc. Web site to obtain manual revisions or current customer information:

http://www.pt.com.

Performance Technologies, Inc., reserves its right to change product specifications without notice.

Symbols and Conventions in this Manual

The following symbols appear in this document:

Caution:
There is risk of equipment damage. Follow the instructions.

Warning:
Hazardous voltages are present. To reduce the risk of electrical shock and danger to personal health, follow the instructions.

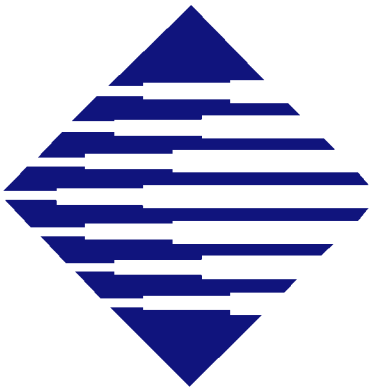

Contents

Chapter 1: About This Guide 11

Overview 11
Text Conventions 12
Customer Support and Services 12
Customer Support Packages 13
Other Web Support 13
Return Merchandise Authorization (RMA) 13
Product Warranty 13

Chapter 2: Introduction 15

Overview 15
PCI334A Models and Accessories 16
Product Summary 17
Programming Differences 18
PCI334A Features 19
MC68360 QUICC 19
PCI9056 PCI Interface 20
Serial Ports 20
Other Features 20
Required Additional Documents 20
Glossary 21

Chapter 3: Installation 23

Overview 23
Configuring the PCI334A 24

Jumpers . . . 25
Option Clock . . . 25
PCI334A Installation . . . 25
Installing the PCI334A card into PC . . . 26
PCI334A Cabling . . . 27
Logic Analyzer Connectors . . . 27

Chapter 4: Functional Description 29

Overview . . . 29
Power Considerations . . . 31
MC68360 Quad Integrated Communications Controller . . . 31
QUICC Setup . . . 31
Resets . . . 35
Optional BDM Port . . . 35
PCI Interface . . . 35
Endian Conversion . . . 36
PCI9056 Setup . . . 36
Modes of Operation . . . 39
Local bus Arbitration Priority . . . 40
PCI9056 Interrupt Requests . . . 40
SRAM Array . . . 41
Timing . . . 41
Parity . . . 41
Flash PROM . . . 41
Line Drivers/Receivers . . . 41
RS232C . . . 41
RS422 (EIA530 or RS449 cabling) . . . 42
V.35 . . . 42
Clock Steering . . . 42
Debug Port . . . 42
Optional Logic Analyzer Connections . . . 43

Chapter 5: Registers 45

Overview . . . 45
TCSL Register . . . 46
Transmit Clock Select . . . 46
RCSL Register . . . 46

Receive Clock Select 46
Status Register 47
Presence Detect 47
PCI User Out 48
Burn-In Mode 48
QUICC Interrupt Register 48
Interrupt 7 48
PCI Interrupt Register 48
PCI Interrupt 49
Misc. Register 49
PCI User In 49
LED Disable 49
Board Configuration Register 50
Mechanical Form Factor 50
Electrical Interface 50
Revision ID 50
PROM Write Enable Register 51
PROM Write Enable 51
Software ID 51

Chapter 6: QUICC I/O Ports 53

Overview 53
QUICC Port A 54
QUICC Port B 55
QUICC Port C 56

Chapter 7: Connector and Cabling 57

Overview 57
RS232C Cabling 58
RS449 Cabling 60
EIA530 Cabling 63
V.35 Cabling 66

Appendix A: Connector Pinouts 69

Overview 69
Factory-Installed Connectors 70
P4 - PCI Connector 70

J1 - 80-pin Connector 72
P1 - Debug Port 73
P2 - BDM Connector 73
Altera ISP Connector 73
Logic Analyzer Connectors 73
P5 - Control 74
P7 - Address 74
P6 - Data 75
P8 - Clock 75

Appendix B: Register Value Changes for SRAM 77

Overview 77
Global Memory Register (GMR) 78
Base Register 1 (BR1) 78
Option Register 1 (OR1) 79
Base Register 2 (BR2) 79
Option Register 2 (OR2) 80

Appendix C: Agency Approvals 81

Overview 81
CE Certification 82
Shielded Cable Notice 82
FCC (USA) Class A Notice 82
Industry Canada Class A Notice 83
Safety Information 83
Safety Precautions 83
Compliance with RoHS and WEEE Directives 84

Index 85

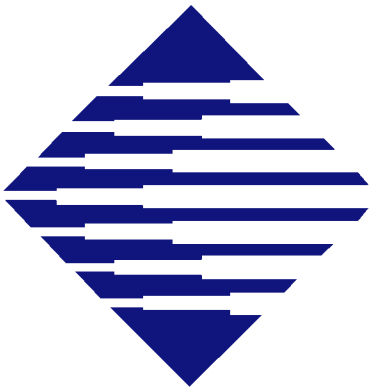

Tables

Table 2-1: PCI334A Part Numbers 16

Table 2-2: PCI334A to PCI334 Product Comparison 17

Table 3-1: Jumper Settings and Functions 25

Table 4-1: PCI334A Power Consumption in a +5V or Mixed +3.3V / +5V System 31

Table 4-2: Device Address Map 32

Table 4-3: QUICC Register Addresses 33

Table 4-4: QUICC Access Timing 34

Table 4-5: QUICC Interrupt Source Map 34

Table 4-6: Addressing for Endian Conversion 36

Table 4-7: PCI9056 PCI Configuration Register Addresses 37

Table 4-8: PCI9056 Local Configuration Register Addresses 37

Table 4-9: PCI9056 Shared Run Time Register Addresses 38

Table 4-10: PCI9056 Local DMA Register Addresses 38

Table 4-11: PCI Interrupt Register Programming Details 40

Table 5-1: TCSL Register 46

Table 5-2: RCSL Register 46

Table 5-3: Status Register 47

Table 5-4: SIMM Speeds 47

Table 5-5: SIMM Size 47

Table 5-6: QUICC Interrupt Register 48
Table 5-7: PCI Interrupt Register 48
Table 5-8: Misc. Register 49
Table 5-9: Board Configuration Register 50
Table 5-10: Electrical Interface ID 50
Table 5-11: PROM Write Enable Register 51
Table 6-1: Port A Configuration Settings 54
Table 6-2: QUICC Port A Mapping (16-bit) 54
Table 6-3: Port B Configuration Settings 55
Table 6-4: QUICC Port B Mapping (18-bit) 55
Table 6-5: Port C Configuration Settings 56
Table 6-6: QUICC Port C Pin Mapping (12-bit) 56
Table 7-1: RS232C Connector Pin Assignments 58
Table 7-2: RS449 Connector Pin Assignments 60
Table 7-3: EIA530 Connector Pin Assignments 63
Table 7-4: V.35 Connector Pin Assignments 66
Table A-1: P4 - PCI Connector Pin Assignments 70
Table A-2: J1 - High Density 80-pin Connector Pin Assignments 72
Table A-3: P1 - Debug Port Pin Assignments 73
Table A-4: P2 - BDM Connector Pin Assignments 73
Table A-5: Altera ISP Connector Pin Assignments 73
Table A-6: Logic Analyzer Connectors Summary 73
Table A-7: P5 - Control Connector Pin Assignments 74
Table A-8: P7 - Address Connector Pin Assignments 74
Table A-9: P6 - Data Connector Pin Assignments 75
Table A-10: P8 - Clock Connector Pin Assignments 75
Table B-1: SRAM Registers 77

Table B-2: Global Memory Register (GMR) Settings 78
Table B-3: Base Register 1 (BR1) Settings 78
Table B-4: Option Register 1 (OR1) Settings 79
Table B-5: Base Register 2 (BR2) Settings 79
Table B-6: Option Register 2 (OR2) Settings 80

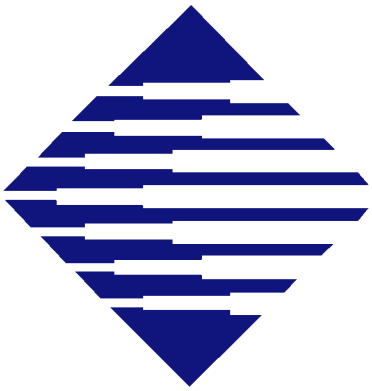

Figures

Figure 2-1: PCI334A Side View Photograph 18

Figure 3-1: PCI334A Component Layout. 24

Figure 3-2: PCI334A Installation Diagram 27

Figure 4-1: PCI334A Block Diagram 30

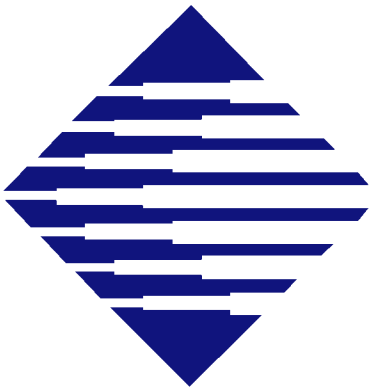

Chapter

1

About This Guide

Overview

This manual describes the operation and use of the PCI334A Universal I/O 32-bit Quad Serial Communications Controller (referred to as the PCI334A in this manual).

In these chapters you will find installation and configuration information, plus a functional block description intended for the application developer of this board. Here is a brief description of what you will find in this manual:

Chapter 1, “About This Guide,” this chapter, provides links to all other chapters in this manual, customer support and services, and product warranty information for the PCI334A.

Chapter 2, “Introduction,” on page 15 describes the PCI334A and the differences between the PCI334 and the PCI334A.

Chapter 3, “Installation,” on page 23 explains how to configure the PCI334A’s jumpers and install the PCI334A into the PCI slot in a PC.

Chapter 4, “Functional Description,” on page 29 details power considerations in multi-voltage environments, QUICC Controller information, and Line drivers and receivers.

Chapter 5, “Registers,” on page 45 describes various PCI334A registers including transmit and receive clock registers, status registers, and PCI interrupt registers.

Chapter 6, “QUICC I/O Ports,” on page 53 explains the registers, addresses and values for the QUICC I/O ports A, B, and C.

Chapter 7, “Connector and Cabling,” on page 57 provides the pinouts, signal names and description for the RS232C, RS449, EIA530 (RS530), and V.35 cables.

Appendix A, “Connector Pinouts,” on page 69 contains tables that describe the pin numbers and signal names of PCI connectors, Debug port, BDM connector, ISP connector, and optional logic analyzer connections.

Appendix B, “Register Value Changes for SRAM,” on page 77 contains tables that describe Global Memory Register (GMR) Settings, Base Register 1 (BR1) Settings, Optional Register 1 (OR1) Settings, Base Register 2 (BR2) Settings, and Option Register 2 (OR2) Settings.

Appendix C, “Agency Approvals,” on page 81 presents agency approval and certification information.

An “Index,” on page 85, is also provided.

Text Conventions

This guide uses the following conventions:

Convention	What it is Used For
`Monospace font`	Monospace font is used to represent sample code.
Bold font	Bold font is used to represent: • pathnames • filenames • UNIX commands • user input
Italic font	Italic font is used to represent: • notes that supply useful advice • general information • referenced documents
Regular font	Regular font is used for the ENTER and TAB keys and the SPACEBAR on your keyboard.

Customer Support and Services

Performance Technologies offers a variety of standard and custom support packages to ensure customers have access to the critical resources that they need to protect and maximize hardware and software investments throughout the development, integration, and deployment phases of the product life cycle.

If you encounter difficulty in using this Performance Technologies, Inc. product, you may contact our support personnel by:

1. **EMAIL** (Preferred Method) – Email us at the addresses listed below or use our online email support form. Outline your problem in detail. Please include your return email address and a telephone number.
2. **TELEPHONE** – Contact us via telephone at the number listed below, and request Technical Support. Our offices are open Monday to Friday, 8:00 a.m. to 8:00 p.m. (Eastern Standard Time).

If you are located outside North America, we encourage you to contact the local Performance Technologies’ distributor or agent for support. Many of our distributors or agents maintain technical support staffs.

Performance Technologies Support Contact Information

	Embedded Systems and Software (Includes Platforms, Blades, and Servers)	SS7 Systems (Includes SEGway™)
Email	support@pt.com	ss7support@pt.com
Phone	+1 (585) 256-0248 (Monday to Friday, 8 a.m. to 8 p.m. Eastern Standard Time)	+1 (585) 256-0248 (Monday to Friday, 8 a.m. to 8 p.m. Eastern Standard Time)

Customer Support Packages

Our configurable development and integration support packages help customers maximize engineering efforts and achieve time-to-market goals. To find out more about our Customer Support packages, visit http://www.pt.com/page/support/.

Other Web Support

Support for existing products including manuals, release notes, and drivers can be found on specific product pages at http://www.pt.com. Use the product search to locate the information you need.

Return Merchandise Authorization (RMA)

To submit a return merchandise authorization (RMA) request, complete the online RMA form available at http://pt.com/assets/lib/files/rma-request-form.doc and follow the instructions on the form. You will be notified with an RMA number once your return request is approved. Shipping information for returning the unit to Performance Technologies will be provided once the RMA is issued.

Product Warranty

Performance Technologies, Incorporated, warrants that its products sold hereunder will at the time of shipment be free from defects in material and workmanship and will conform to Performance Technologies' applicable specifications or, if appropriate, to Buyer's specifications accepted by Performance Technologies in writing. If products sold hereunder are not as warranted, Performance Technologies shall, at its option, refund the purchase price, repair, or replace the product provided proof of purchase and written notice of nonconformance are received by Performance Technologies within 12 months of shipment, or in the case of software and integrated circuits within ninety (90) days of shipment and provided said nonconforming products are returned F.O.B. to Performance Technologies's facility no later than thirty days after the warranty period expires. Products returned under warranty claims must be accompanied by an approved Return Material Authorization number issued by Performance Technologies and a statement of the reason for the return. Please contact Performance Technologies, or its agent, with the product serial number to obtain an RMA number. If Performance Technologies determines that the products are not defective, Buyer shall pay Performance Technologies all costs of handling and transportation. This warranty shall not apply to any products Performance Technologies determines to have been subject to testing for other than specified electrical characteristics or to operating and/or environmental conditions in excess of the maximum values established in applicable specifications, or have

been subject to mishandling, misuse, static discharge, neglect, improper testing, repair, alteration, parts removal, damage, assembly or processing that alters the physical or electrical properties. This warranty excludes all cost of shipping, customs clearance and related charges outside the United States. Products containing batteries are warranted as above excluding batteries.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES WHETHER EXPRESS, IMPLIED OR STATUTORY INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS. IN NO EVENT SHALL PERFORMANCE TECHNOLOGIES BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES DUE TO BREACH OF THIS WARRANTY OR ANY OTHER OBLIGATION UNDER THIS ORDER OR CONTRACT.

Chapter

2

Introduction

Overview

This document provides information for users of the PCI334A Universal I/O 32-bit PCI Quad Serial Communications Controller.

Note: *Performance Technologies, Inc. has a similar product with a very similar model name, the PCI344. Ensure that you are using the correct manual for the applicable product.*

This manual is not intended as a stand-alone document. If you plan on writing software for this product the references cited in the “Required Additional Documents,” on page 20 are necessary to have a complete understanding of all the features and functions of the hardware.

This manual does provide the information necessary to understand the operation and features of the board. A prime objective was to answer those questions raised by system developers as to whether the PCI334A will complement their architecture. When combined with the required documentation listed below, a complete description of PCI334A facilities are presented.

Topics covered in this chapter include:

- “PCI334A Models and Accessories,” on page 16
- “Product Summary,” on page 17
- “Programming Differences,” on page 18
- “PCI334A Features,” on page 19
- “Required Additional Documents,” on page 20
- “Glossary,” on page 21

PCI334A Models and Accessories

Table 2-1, “PCI334A Part Numbers,” lists the PTI part numbers for the models and accessories available for the PCI334A.

Table 2-1: PCI334A Part Numbers

Item	Non-RoHS Part Number	RoHS Part Number
PCI334A Versions		
Four Port Sync. Serial Controller (RS232C)	PT-PCI334A-11666	PT-PCI334A-11890
Four Port Sync. Serial Controller (RS449/EIA530)	PT-PCI334A-11667	PT-PCI334A-11891
Four Port Sync. Serial Controller (V.35)	PT-PCI334A-11668	PT-PCI334A-11892
Cable Options		
Four Port V.35 Hydra Cable, DTE with thumbscrews	PT-ACC334-10622	PT-ACC334-11918
Four Port RS232C Hydra Cable, DTE with jackscrews	PT-ACC334-10623	PT-ACC334-11919
Four Port RS232C Hydra Cable, DTE with thumbscrews	-	PT-ACC334-12274
Four Port EIA530 Hydra Cable, DTE with jackscrews	PT-ACC334-10624	PT-ACC334-11969
Four Port EIA530 Hydra Cable, DTE with thumbscrews	-	PT-ACC334-12273
Four Port RS449 Hydra Cable, (Socket) Sun Substitute, DTE with jackscrews	PT-ACC334-10741	PT-ACC334-11920
Four Port RS449 Hydra Cable, (Pin) DTE with jackscrews	PT-ACC334-10722	PT-ACC334-11921

RoHS/Non-RoHS Notice

This manual covers both RoHS and Non-RoHS versions of the PCI334A. It is important to know what version of the PCI334A you are using to obtain accurate information for set-up, installation and the proper use of the product. See “Compliance with RoHS and WEEE Directives,” on page 84 for more information.

Product Summary

The PCI334A PCI Quad Communications Controller (shown in Figure 2-1, “PCI334A Side View Photograph,” on page 18) is a design update to the PCI334A, required due to components obsolescence. As part of this update, certain characteristics of the PCI334A are revised or enhanced. Maintaining software compatibility at the user level is the prime objective. Table 2-2, “PCI334A to PCI334 Product Comparison,” summarizes the differences between the old and new designs.

Table 2-2: PCI334A to PCI334 Product Comparison

Feature	PCI334 (Old)	PCI334A (New)
Power Supply	5V, +/-12V required for operation	Can be run in 5V or mixed 3.3V / 5V backplane with on-board switching power supply. All components are 3.3V.
VIO	5V only	3.3V or 5V (Universal I/O signaling))
PCI Interface	PLX PCI9060, 5V	PLX PCI9056, 3.3V
PCI Speed	33 MHz only	66 MHz (33MHz jumper selectable)
Processor	68360 rev L, 5V	68360 rev L, 3.3V
Memory	4 Megabyte 60 ns DRAM SIMM, expandable to 16 Megabyte	4 Megabytes 70 ns SRAM, fixed size, factory installed
Boot Flash	AM29F010, 128K x 8, 5V	AM29LV040, 512 K x 8, 3.3V
Hardware Reset	QUICC generated	Hardware generated
RS232C Data Rate	40 Kbps maximum (14C88/14C89, 5V, +/-12V)	250 Kbps minimum (ICL3223E, 3.3V)
RS422	26LS31/26LS32, 5V	MAX3031E/MAX3096, 3.3V
V.35	LTC1345, 5V	LTC2846/ICL3223E, 3.3V
Optional Oscillator	Surface mount solderable location for plastic part, 5V	Socket for half-size can shielded oscillator, 3.3V[1]
Console Connector	Straight	Right angle
Programmable Logic	Fixed	In circuit programmable
Board revision ID	External resistors	Internal to PLD
PCI Device ID	0x0334	0x334a
Software ID	---	6
PCI Bracket	Mounted from bottom side	Mounted from top side
Chassis to Digital Ground Connection	Zero ohm resistors	Jumper

1. Socket not present on the RoHS version.

Figure 2-1: PCI334A Side View Photograph

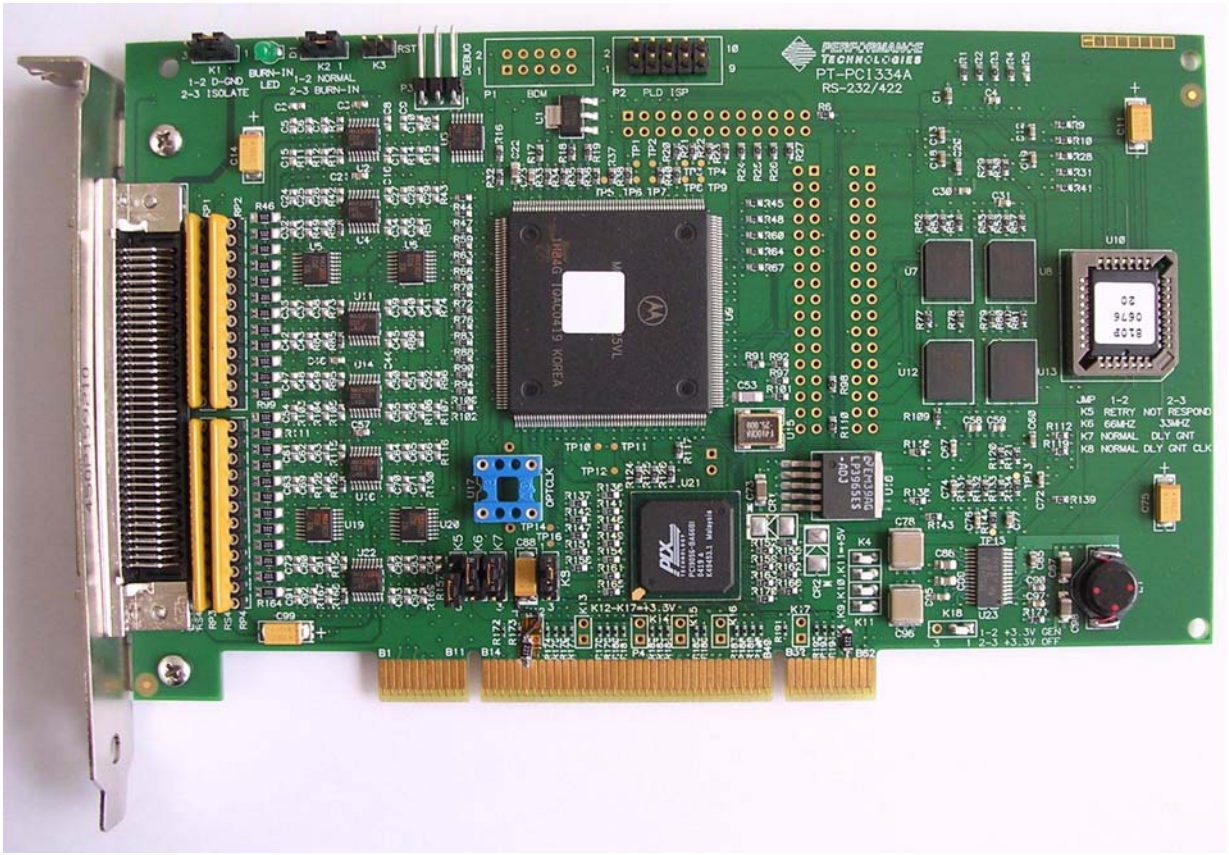

Programming Differences

Some modifications are necessary to the QUICC register values for proper operation of the PCI334A with the SRAM instead of the DRAM SIMM on the PCI334. These disable the DRAM controller and enable the SRAM controller. The registers are:

- Global Memory Register
- Base Register 1
- Option Register 1
- Base Register 2
- Option Register 2

Further description of the changes can be found in Appendix B, “Register Value Changes for SRAM,” on page 77.

In addition, the PCI Device ID has been changed to 0x334a. This is in one of the PCI9056 Configuration Registers. A new register field has been added, the Software ID. It is in the PROM Write Enable Register (one of the local registers). Its value is 6 (decimal).

PCI334A Features

MC68360 QUICC

- CPU32+ Processor (4.5 MIPS at 25 MHz)
  - 32-Bit Version of the CPU32 Core (Fully Compatible with the CPU32)
  - Background Debug Mode
  - Byte-Misaligned Addressing
- Four General Purpose Timers
  - Superset of MC68302 Timers
  - Four 16-Bit Timers or Two 32-Bit Timers
- Two Independent DMAs (IDMAs)
  - Single Address Mode for Fastest Transfers
  - Buffer Chaining and Auto Buffer Modes
  - Automatically Performs Efficient Packing
- System Integration Module (SIM60)
  - Bus Monitor
  - Double Bus Fault Monitor
  - Software Watchdog
  - Periodic Interrupt Timer
  - Low Power Stop Mode
  - Breakpoint Logic Provides On-Chip Hardware Breakpoints
- Four Serial Communication Controllers (SCC)
  - HDLC/SDLC™
  - Signaling System #7 (SS7)
  - Binary Synchronous Communication (BISYNC)
  - Totally Transparent (Bit Streams)
  - Totally Transparent (Frame Based with Optional Cyclic Redundancy Check (CRC))
  - Asynchronous HDLC
  - DDCMP™
  - V.14
  - X.21
- Two Serial Management Controllers (SMC)
  - UART
  - Transparent
  - General Circuit Interface (GCI) Controller
- Communications Processor Module (CPM)
  - RISC Controller
  - 224 Buffer Descriptors
  - Supports Continuous Mode Transmission and Reception on All Serial Channels
  - 2.5 KBytes of Dual-Port RAM
  - 14 Serial DMA Channels
- Four Baud Rate Generators

- Independent (can be connected to any SCC or SMC)
- Allows Changes During Operation
- Autobaud Support Option

PCI9056 PCI Interface

- PCI Compliance Revision 2.2
- 32-bit, 66 MHz operation
- Register compatible with PCI9054, PCI9656, PCI9060, and PCI9080
- PCI Bus Master Transfers up to 264 MBps
- Two Independent DMA Channels
- Bi-Directional Chaining DMA Controller
- Two Bi-Directional FIFOs for DMA
- Four FIFOs for Direct Master/Slave Read/Write
- Eight 32-bit Mailboxes and Two 32-bit Doorbell Registers

Serial Ports

- Full RS232C, RS422, or V.35 Support on All Four Ports
- Optional On-Board Clock Provision
- Internal or External Serial Data Clocks
- Five Modem Control Signals per Port (Seven for V.35 configuration)

Other Features

- 4 MByte 70 ns Dual Ported Low Power Asynchronous Static RAM
- 512 KByte (4Mbit) Flash PROM (boot)
- On-board RS232 Debug Port
- Mechanical - ISA/EISA Short Length, 3.3V/5V, 32-bit PCI Card

Required Additional Documents

PCI Local Bus Specification

Revision 2.2, 1998. PCI Special Interest Group; 2575 N.E. Kathryn #17, Hillsboro, OR 97214.

More information at: http://www.pcisig.com/

MC68360 QUICC User's Manual Rev 1

MC68360UM/AD; Motorola Incorporated. Motorola Literature Distribution; P.O. Box 20912; Phoenix, AZ 85036.

Available at: http://www.motorola.com/semiconductors/

PLX PCI9056 Databook

Product Catalog. PLX Technology, 870 Maude Avenue; Sunnyvale, CA 94085.

More information at: http://www.plxtech.com/

Glossary

Bps	Bytes per second
bps	Bits per second
CPU	Central Processing Unit
DMA	Direct Memory Access, hardware controller block data transfers
DMAC	Direct Memory Access Controller
DRAM	Dynamic Random Access Memory
half-word	In this manual, this term indicates a 16-bit value
HDLC	High-Level Data Link Control
Lbus	Local PCI334A on-board bus
MByte	Megabyte
MPU	Micro-Processor Unit
ms.	Millisecond
PCI9056	PCI Bus Master Interface Chip
QUICC	Quad Integrated Communications Controller
reserved	The term used for bits, bytes, fields, code values, etc. that are set aside for future use
SCC	QUICC Serial Communications Controller
SDLC	Synchronous Data Link Control
SMC	QUICC Serial Management Controllers
word	In this manual, this term indicates a 32-bit value
xxh	Numbers followed by lowercase h are hexadecimal values. All other numbers are decimal values To help with readability, large hexadecimal values use a '.' to indicate 16 bit (4 nibble) boundaries. In this document, the period does *not* indicate a decimal place in a hexadecimal number

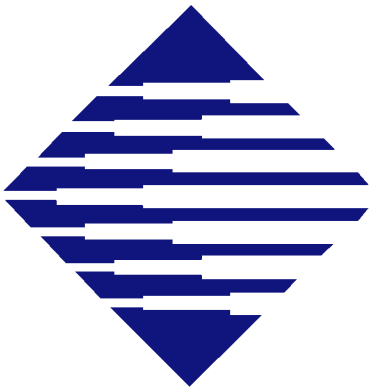

Chapter

3

Installation

Overview

This chapter describes how to configure the PCI334A's jumpers and install the PCI334A into the PCI slot in a PC.

Topics covered in this chapter include:

- "Configuring the PCI334A," on page 24
- "Jumpers," on page 25
- "Option Clock," on page 25
- "PCI334A Installation," on page 25
- "PCI334A Cabling," on page 27
- "Logic Analyzer Connectors," on page 27

Installation is a three step process:

- Configure the PCI334A for your application.
- Install the PCI334A.
- Bring up your system.

Configuring the PCI334A

Figure 3-1: PCI334A Component Layout

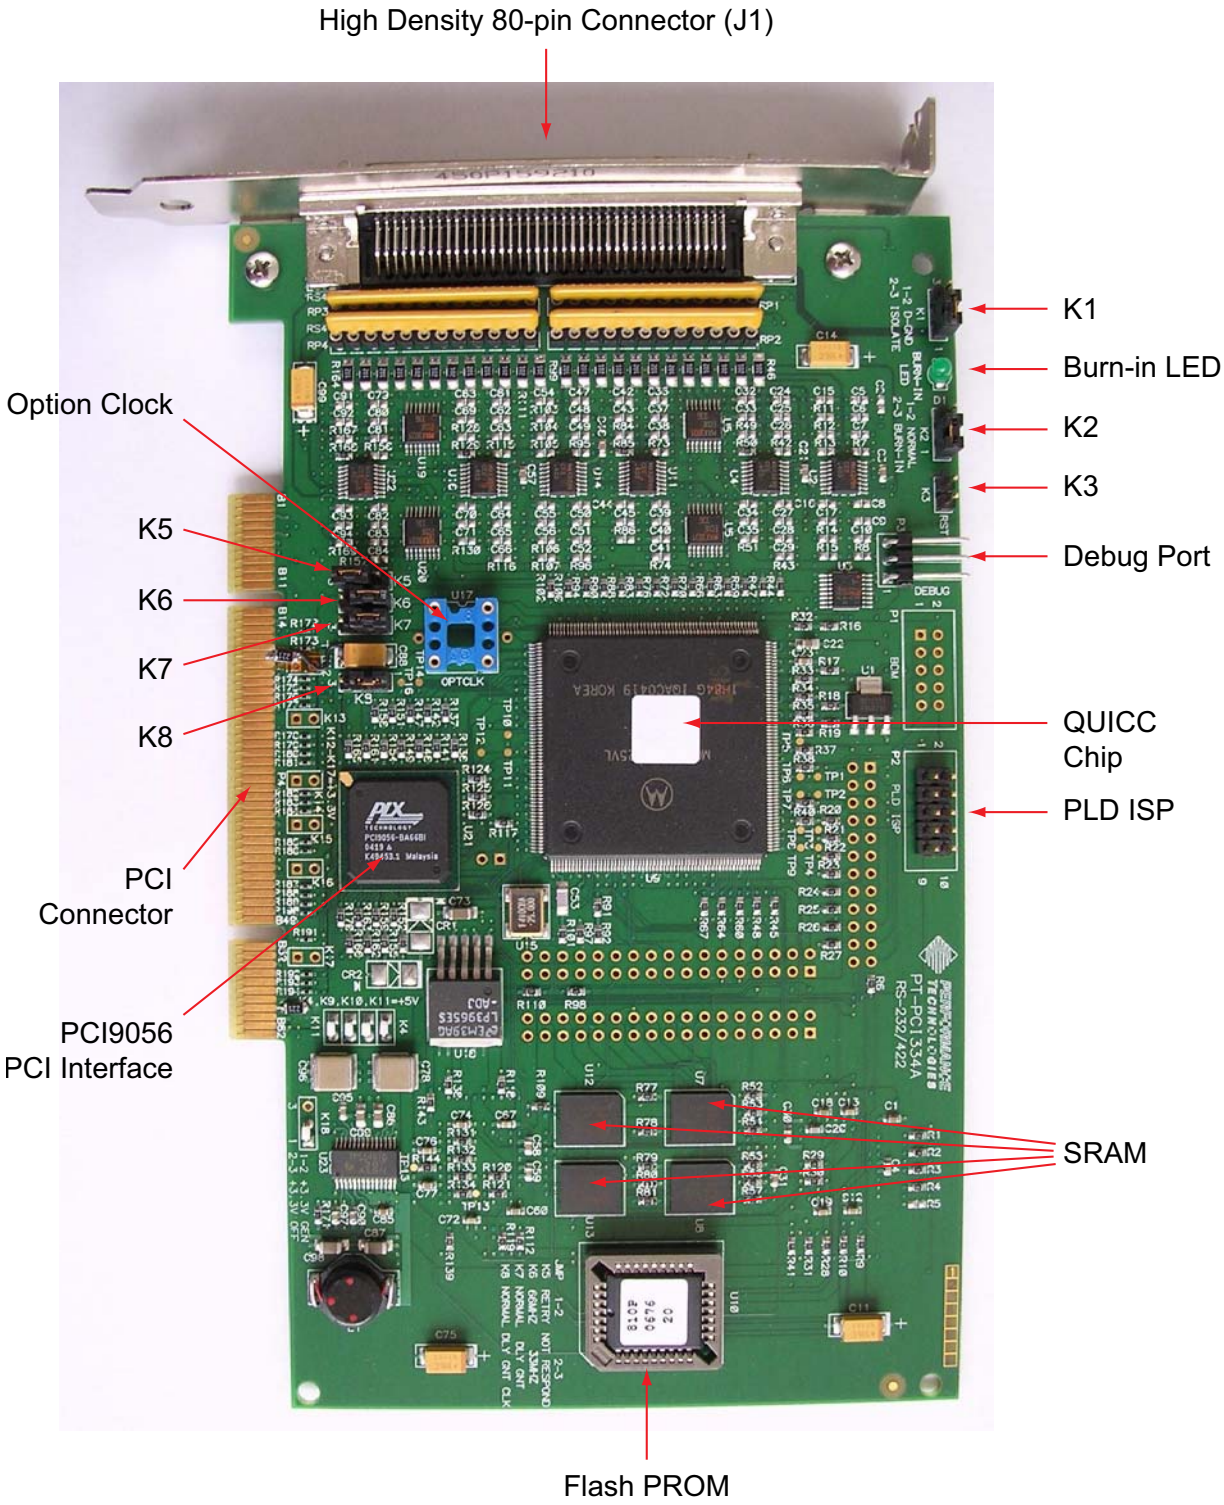

Jumpers

There are several jumpers on the PCI334A, shown in Figure 3-1, “PCI334A Component Layout,” on page 24. Table 3-1, “Jumper Settings and Functions,” shows a summary of board jumpers. No special tools are required to move jumpers. Reposition the jumpers as defined in the following table. An asterisk (*) indicates the normal factory settings.

Table 3-1: Jumper Settings and Functions

Jumper	Pins	In/Out	Function
K1	1-2	In	Connect Digital to Chassis ground
	2-3	In*	Isolate Digital from Chassis ground
K2	1-2	In*	Normal mode
	2-3	In	Burn-In mode
K3	1-2	Out*	Manually forces Hardware Reset to the QUICC
K5	1-2	In*	PCI9056 initially RETRY PCI configuration accesses
	2-3	In	PCI9056 initially NOT RESPOND to PCI configuration accesses
K6	1-2	In*	M66EN signal input from backplane. When high, it configures for operation above 33 MHz to a maximum of 66 MHz. When low, operation is from 25 MHz to 33 MHz.
	2-3	In	M66EN signal is grounded, forcing operation from 25 MHz to 33 MHz.
K7	1-2	In*	Normal mode
	2-3	In	Delay GNT# signal one PCI clock
K8	1-2	In*	Normal mode
	2-3	In	Delay GNT# signal one PCI clock

* Factory Default Setting

Option Clock

If your application has a need for a receive clock frequency different than that received from the serial interface, a crystal oscillator can be installed on the PCI334A. The location U17 is silk-screened “OPTCLK” and is located on the component side near the PCI connector. This location can be populated with a half size can oscillator of the desired frequency. See Figure 3-1, “PCI334A Component Layout,” on page 24.

The optional clock is configured for a four-pin through hole oscillator. Pin 1 is a pulled-up output enable, pin 4 is connected to ground, pin 5 is the TTL output of the oscillator, and pin 8 is connected to +3.3V. A socket is provided for installation of the component on the Non-RoHS version.

PCI334A Installation

Before starting, please note the following about the mechanical aspects of the PCI334A:

- The PCI334A meets PCI Revision 2.2.
- The PCI334A has been tested for mechanical compatibility. The PCI334A installs in most systems without issue.

Installing the PCI334A card into PC

Use the following steps to install the PCI334A card into a PCI slot. See Figure 3-2, “PCI334A Installation Diagram,” on page 27.

Caution:
Electronic components on printed circuit boards are extremely sensitive to static electricity. Ordinary amounts of static electricity generated by your clothing or work environment can damage the electronic equipment. It is recommended that when installing the PCI334A in a system that anti-static grounding straps and anti-static mats are used to help prevent damage due to electrostatic discharge.

1. Quit all applications. Power down the PC and any attached peripherals. Remove the top cover of the PC.
2. Configure the PCI334A. See “Configuring the PCI334A,” on page 24 for a complete description of setup issues and jumper configuration procedures.
3. Select an available PCI slot and remove the slot filler panel.
4. Slide the PCI334A into the PCI connector of the system unit. Make sure the front plate on the PCI334A card mounts flush with the chassis panel opening.
5. Install the front plate screw to secure the PCI334A card into the chassis. This also provides a chassis ground connection to the PCI334A.
6. Replace the top cover.
7. Install the serial port cable assembly to the PCI334A connector.
8. Reconnect any cables from the peripheral devices. This completes the hardware installation. At this point, turn power back on to the PC and proceed to any Software Installation Instructions that may have been provided.

Figure 3-2: PCI334A Installation Diagram

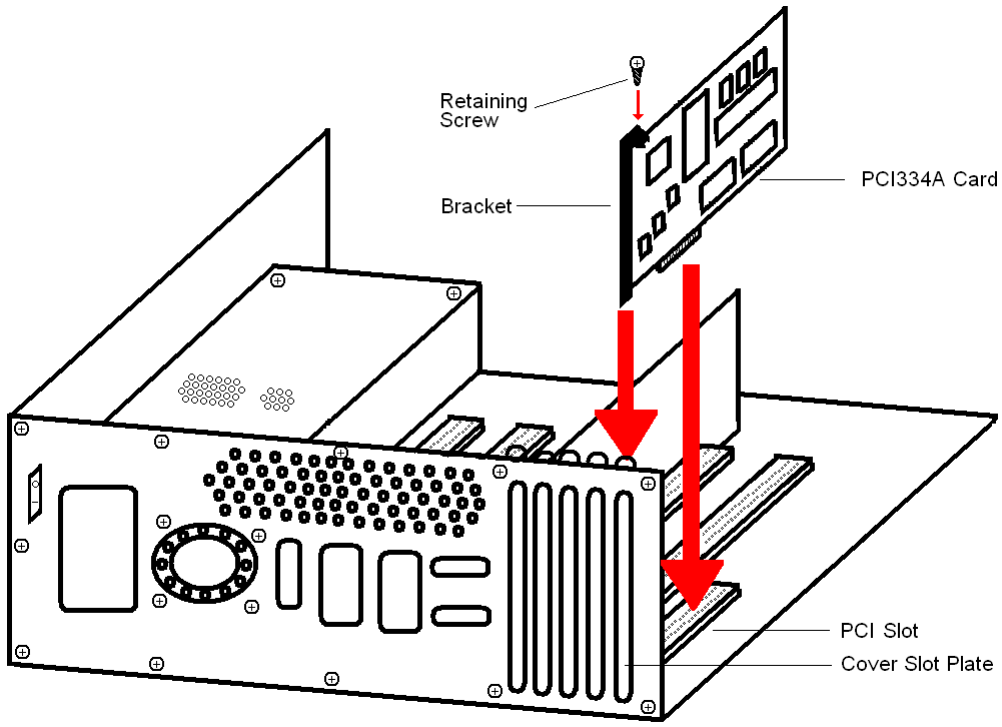

PCI334A Cabling

The PCI334A provides external connectivity through a passive cabling system. A hydra-style connector provides front panel serial port connectivity to four DB25 connectors for the RS232C and EIA530 versions, four DB37 connectors for the RS449 version, and M34 connectors for the V.35 version, in DTE configuration (pins).

Logic Analyzer Connectors

The PCI334A permits the optional installation of connectors for use by a logic analyzer or other test equipment. The connectors must be installed on the secondary side of the board. The connector pin assignments can be found in “Logic Analyzer Connectors,” on page 73.

Chapter

4

Functional Description

Overview

The PCI334A Universal I/O 32-bit Quad Serial Communications Controller provides four serial channel interfaces for high performance synchronous communications on a PCI host system. The design incorporates a Motorola MC68360 Quad Integrated Communications Controller (QUICC) and a PLX PCI9056 with DMA capability. Code storage and data buffering are provided by an SRAM array, which is shared between the QUICC and the PCI9056.

Serial line electrical interfacing is available on-board providing voltage level adaptation to a Recommended Standard, such as RS232C, RS422 (RS449 or EIA530 cabling), or V.35.

The PCI bracket interface connection on the PCI334A uses an 80-pin Amplimite receptacle containing the signals for all four ports. To provide an industry standard connection for each port, hydra-style adapter cables are offered. Adapter cable wiring details for each style cable is also provided.

The PCI334A supports an optional crystal oscillator to provide custom synchronous clock speeds. A single green LED is provided as a software-controlled indicator.

Topics covered in this chapter include:

- “Power Considerations,” on page 31
- “MC68360 Quad Integrated Communications Controller,” on page 31
- “Resets,” on page 35
- “Optional BDM Port,” on page 35
- “PCI Interface,” on page 35
- “SRAM Array,” on page 41
- “Flash PROM,” on page 41
- “Line Drivers/Receivers,” on page 41

- “Clock Steering,” on page 42
- “Debug Port,” on page 42
- “Optional Logic Analyzer Connections,” on page 43

The block diagram in Figure 4-1, “PCI334A Block Diagram,” demonstrates the major components of this design.

Figure 4-1: PCI334A Block Diagram

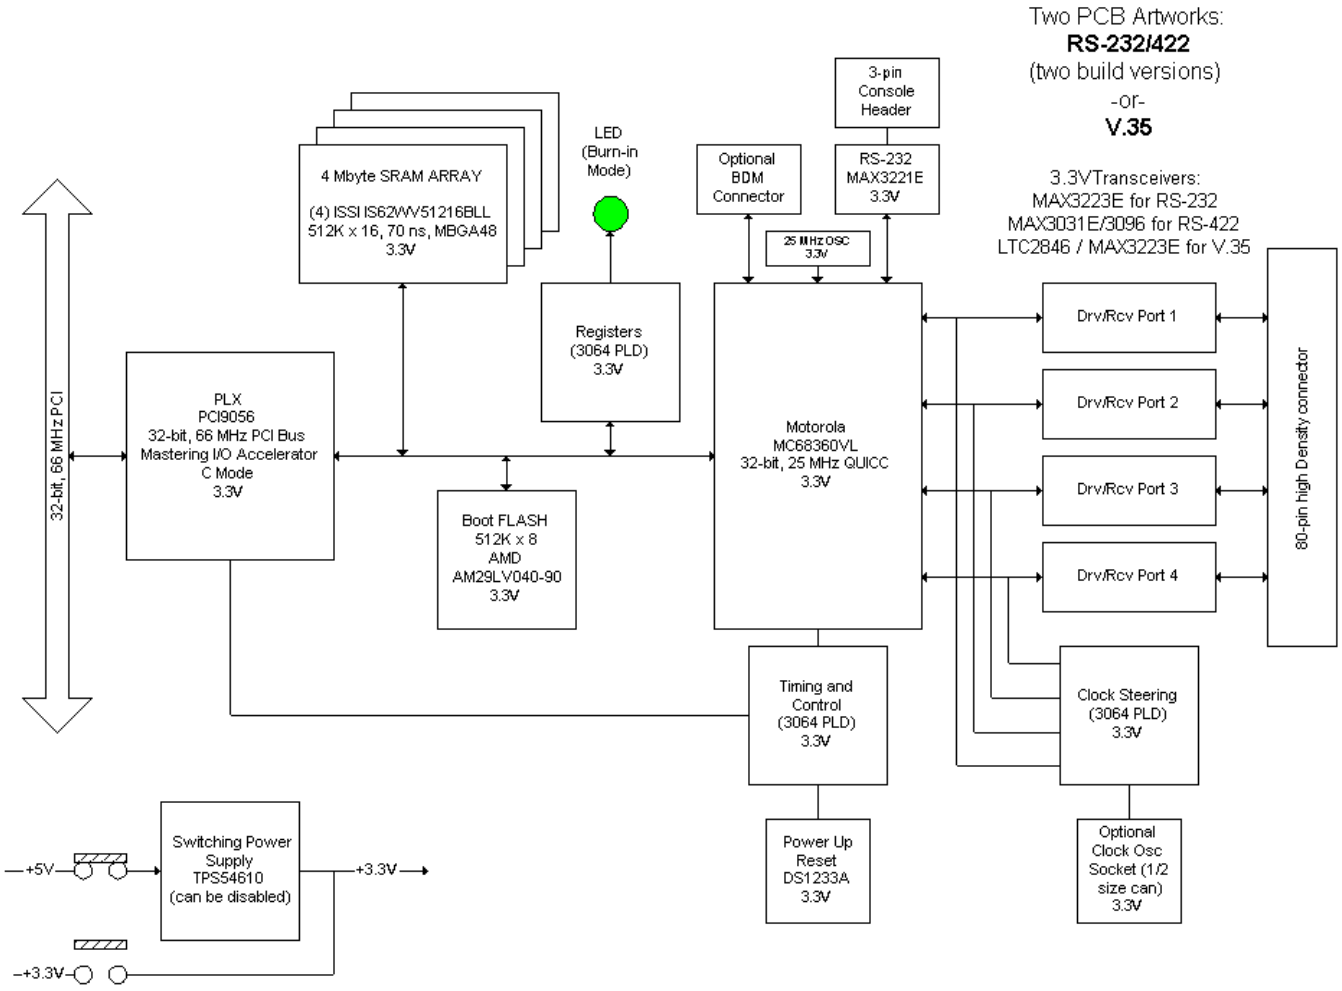

Power Considerations

The PCI334A is a Universal I/O card, meaning it is compatible with either +3.3V or +5V VIO on the PCI backplane. The PLX PCI9056 interface chip can tolerate these voltages.

The board is designed to operate in +5V only and mixed +5V/+3.3V powered backplanes.

Typical and maximum power consumption of the PCI334A is presented in Table 4-1, “PCI334A Power Consumption in a +5V or Mixed +3.3V / +5V System,” on page 31. +12V and –12V are not used by the PCI334A.

Table 4-1: PCI334A Power Consumption in a +5V or Mixed +3.3V / +5V System

Board Type	Voltage	Typical	Maximum
PCI334A-11890 (RS232C)	+3.3V	0A	0A
PCI334A-11890 (RS232C)	+5V	0.7A	0.9A
PCI334A-11891 (RS422)	+3.3V	0A	0A
PCI334A-11891 (RS422)	+5V	0.7A	0.9A
PCI334A-11892 (V.35)	+3.3V	0A	0A
PCI334A-11892 (V.35)	+5V	1.1A	1.4A

MC68360 Quad Integrated Communications Controller

The PCI334A incorporates a Motorola MC68360 Quad Integrated Communications Controller (QUICC).

QUICC Setup

The QUICC requires concentrated effort in the set up of its configuration register set. The *MC68360 Quad Integrated Communications Controller, User’s Manual* is the best source for information into the details of programming and operation of the QUICC.

Device Address Map

The PCI334A internal address space is divided into eight major areas using the General-Purpose Chip-Select feature of the QUICC. The decoding, provided by the Chip Select logic, is controlled by the Global Memory Register (GMR) and the Memory Controller Status Register (MSTAT). See the QUICC User’s Manual for more information on the GMR and MSTAT registers.

The address map of each functional element is provided in Table 4-2, “Device Address Map,” on page 32. The QUICC occupies 8 KBytes of address space for internal memory and registers. The base address for these is stored in the Memory Base Address Register (MBAR) which resides at the fixed address of 0003.FF00h. Since the MBAR is programmable, the beginning addresses for the internal Dual-Ported RAM (DPRBASE) and the internal registers (REGB) are relocatable.

This map applies for QUICC and PCI slave accesses. A single PROM device contains the QUICC Boot Firmware as well as the PCI configuration information. The QUICC has access to the entire address range as shown in this table. The PCI Bus has access to the entire range with the exception of the local boot PROM.

PCI slave accesses to the Local bus arbitrate for Local bus with the QUICC chip. When the PCI9056 is master of the Local bus, the address and control signals are enabled and the QUICC's System Integration Module (SIM60) provides address decoding for the various resources. The function code is generated by logic, and is fixed at the value of 05h (Supervisory Data space).

Table 4-2: Device Address Map

Device	Size[1]	Data Width[2]	QUICC Address	PCI Address[3]	Purpose	Pin
PROM	512 KB	Byte	0000.0000h	NA	Boot Firmware	CS0
QUICC	1 W	Word	0003.FF00h	0003.FF00h	MBAR	
QUICC	4 KB	varies	0004.0000h	0004.0000h	DPRBASE	
QUICC	4 KB	varies	0004.1000h	0004.1000h	REGB	
PCI9056 Registers	256 B	Word	0010.0000h	CFG/Host[4]	PCI9056 Registers	CS7
Status Register	1 B	Word	0010.1000h	0010.1000h	Board Status	CS6
QUICC Interrupt Register	1 b	Word	0010.1100h	0010.1100h	QUICC L7 Interrupt	CS6
PCI Interrupt Register	1 b	Word	0010.1200h	0010.1200h	PCI Interrupt	CS6
Misc. Register	1 B	Word	0010.1300h	0010.1300h	Misc. PCI9056 Control	CS6
Reserved	1 B	Word	0010.1400h	0010.1400h	Reserved	CS6
Reserved	1 B	Word	0010.1500h	0010.1500h	Reserved	CS6
Board Config Register	1 B	Word	0010.1600h	0010.1600h	Misc. Configuration Info	CS6
PROM WE Register	1 b	Word	0010.1700h	0010.1700h	PROM Write Enable	CS6
TCSL Register	1 B	Word	0011.0200h	0011.0200h	Transmit Clock Select	CS5
RCSL Register	1 B	Word	0011.0300h	0011.0300h	Receive Clock Select	CS5
SRAM	2 MB	variable	0040.0000h	0040.0000h	Code/Data	CS1
SRAM	2 MB	variable	0060.0000h	0060.0000h	Code/Data	CS2
Reserved						CS3
Reserved						CS4

1. B=Byte, b=bit
2. Word=32 bits
3. PCI Address indicates offset from PCI Base Address Local Address Space 0 value loaded by the host.
4. PCI Address for PCI9056 Registers (Local Config, Shared Run Time) indicates offset from PCI Base Address for Mapped Runtime Registers value loaded by the host. PCI9056 PCI Config Registers () are accessed by PCI Configuration (CFG) cycles.

QUICC Register Setup

All internal memory and registers of the QUICC occupy a single 8-KByte memory block that is relocatable along 8-KByte boundaries. The location is fixed by writing the desired base address of the 8-KByte memory block to the Memory Base Address Register (MBAR). The MBAR resides at a fixed location in 0003.FF00. The MBAR is a write only register.

The 8-KByte block is divided into two 4-KByte sections. The dual port RAM occupies the first section; the internal registers occupy the second section. The starting addresses of these two sections are referred to in the QUICC manual as the Dual-Port RAM Base (DPRBASE) and the Register Base (REGB), respectively.

The MBAR is loaded at initialization time with a value of 0004.0000. This determines the values of DPRBASE and REGB. Note that these are not actually registers but base addresses. Table 4-3, “QUICC Register Addresses,” is a list of the critical QUICC registers and settings for proper board operation.

Table 4-3: QUICC Register Addresses

Register	QUICC Address	Width in Bits	Setting
MBAR	0003.FF00h[1]	32	0x00040000
DPRBASE	0004.0000h[2]	32	NA
REGB	0004.1000h[3]	32	NA
MCR	0004.1000h	32	0x0000ec7f
AVR	0004.1008h	8	0xa0
CLKOCR	0004.100Ch	8	0x0c
PLLCR	0004.1010h	16	0x8000
CDVCR	0004.1014h	16	0x0780
PEPAR	0004.1016h	16	0x0440
SYPCR	0004.1022h	8	0x0c
GMR	0004.1040h	32	0x00000000[4]
BR0	0004.1050h	32	0x00000001
OR0	0004.1054h	32	0x3ff80004
BR1	0004.1060h	32	0x00400009[4]
OR1	0004.1064h	32	0x2fe00000[4]
BR2	0004.1070h	32	0x00600009[4]
OR2	0004.1074h	32	0x2fe00000[4]
BR3	0004.1080h	32	0xf0000001[4]
OR3	0004.1084h	32	0xf0000006[4]
BR4	0004.1090h	32	0xd0000001[4]
OR4	0004.1094h	32	0x3ff800040[4]
BR5	0004.10a0h	32	0x00110001
OR5	0004.10a4h	32	0x4ffff800
BR6	0004.10b0h	32	0x00101001
OR6	0004.10b4h	32	0x4ffff800
BR7	0004.10c0h	32	0x00100001
OR7	0004.10c4h	32	0xfffff806[4]

1. MBAR is at a fixed address. The value in MBAR determines the value of DPRBASE and REGB
2. Base Address of QUICC Dual-Port RAM section.
3. Base Address of QUICC Register section
4. revised from PCI334

The base and option register settings correspond to the device address map provided in Table 4-2, “Device Address Map,” on page 32, and the device access timing provided for reference in Table 4-4, “QUICC Access Timing,” on page 34.

The QUICC I/O ports are explained Chapter 6, “QUICC I/O Ports,” on page 53.

Table 4-4: QUICC Access Timing

Device Type	Device Speed	Tcyc[1]	Memory Cycle Time[2]	# Wait States
PROM	90 ns.	3	200 ns.	2
SRAM	70 ns.	1	120 ns.	1
Registers	15 ns.	8	400 ns.	7
PCI Master		N.A.		-

1. Tcyc = Value loaded into memory controller’s option register for the internally generated DSACKs
   N.A. means Not Applicable because the DSACK signals are generated by logic external to the 68360.
2. 68360 Address Strobe period plus one clock cycle.

QUICC Interrupts

The QUICC receives an interrupt at level 7 from the QUICC Interrupt Register accessible by the PCI Bus at the address defined in Table 4-2, “Device Address Map,” on page 32. This interrupt is asserted by setting the MSb (D31). The interrupt is removed when this bit is cleared (write D31 = 0). The value of this latch may be read at any time. This interrupt is defined on the QUICC as auto-vectored and its state may be verified by reading the D31 bit. This register contains a Flip-Flop that maintains the state of the interrupt request. This interrupt is also cleared when reset is asserted, removing any pending requests. The QUICC Interrupt Register is described in full in Chapter 5, “Registers,” on page 45.

A QUICC level 7 interrupt may also be generated from a software watchdog option available on the QUICC. This option is controlled in the QUICC SYPCR.

The QUICC receives an interrupt at level 5 from several sources via the PCI9056. This interrupt can be cleared by disabling the source’s enable bit, or clearing the cause of the interrupt. See "PCI Interrupt" on page 49 for more information.

Table 4-5, “QUICC Interrupt Source Map,” defines interrupts to the QUICC and the process by which they are removed.

Table 4-5: QUICC Interrupt Source Map

Source	Level	Vector[1]	Removal Service
PCI9056 Local Interrupt	5	Auto-vectored	Clear source or remove enable
QUICC Interrupt Register	7	Auto-vectored	Clear MSB in register
Software Watchdog Option[2]	7	Auto-vectored	Acknowledge Cycle

1. Those auto-vectored interrupts must be programmed as such by means of the MC68360 IP’s Auto Vector Register.
2. The software watchdog timer (SWT) can be programmed to generate a board Reset or a level 7 interrupt with programmable vector number.

Timers

The QUICC has four general purpose timer modules, a periodic interrupt timer, a software watchdog timer, and a bus cycle period monitor.

The software watchdog timer may be used to interrupt the CPU, or reset the PCI334A logic and CPU. This QUICC reset output does not initialize the PCI9056.

Bus cycles performed by the CPU are monitored by a timer within the QUICC. This is controlled by the BME bit and the BMT field of the SYPCR (register).

Resets

The PCI Reset signal has the effect of initializing all of the PCI334A logic. This signal is normally asserted during a power up PCI reset by the Host system. The PCI Reset is distributed to the QUICC Soft Reset (RESETS) pin and other on-board logic.

The QUICC may generate a Soft RESET by execution of the RESET instruction, or a watchdog time-out. This initializes the QUICC and its control logic and resets the Local Bus portion of the PCI9056, re-initializing all local configuration registers.

The QUICC can also be reset by asserting the signal on the Hard RESET pin. This pin is attached to the optional background debug mode connector. Asserting this signal initializes the QUICC and its control logic and resets the Local Bus portion of the PCI9056, re-initializing all local configuration registers.

A host may also hold the PCI334A in reset by setting the PCI Adapter Software Reset bit in the PCI9056 “EEPROM Control, PCI Command Codes, User I/O Control, Init Control Register.” Setting this bit generates a continuous Soft Reset.

Optional BDM Port

The PCI334A permits the addition of a 2 x 5-pin header strip in position P2 so that a Background Debug Mode (BDM) Connector may be added (Samtec[1], part number TSM-15-01-S-DV). P2 allows a thru-hole header on the component side of the board. P2 is defined in the QUICC manual Section 9.9 (page 9-94). A momentary reset switch may be attached to the RESETH pin (P2 PIN 7) to provide a convenience during development. The pinout for the BDM port is shown in Table A-4, “P2 - BDM Connector Pin Assignments,” on page 73.

PCI Interface

The PCI9056 requires concentrated effort in the setup of its configuration and runtime registers. The PCI9056 data sheet is the best source for information into the details of programming and operating the PCI9056.

See Figure 3-1, “PCI334A Component Layout,” on page 24.

1. Samtec’s Web site is http://www.samtec.com/.

Endian Conversion

Proper care must be taken when accessing local addresses from the PCI Bus and PCI9056 Registers from the local bus. The hardware does not handle endian conversion from the big endian local bus to the little endian PCI Bus (and interface). Accesses from the PCI Bus less than 32-bits wide must change the lower two address bits for proper data bytes to be read/ written as shown in Table 4-6, “Addressing for Endian Conversion,” on page 36.

The QUICC has the capability to transmit and receive SCC data using little endian byte ordering instead of the standard big endian byte ordering. This is set up in the QUICC’s RFCR and TFCR registers.

Table 4-6: Addressing for Endian Conversion

Data	Local Address Offset	PCI Address Offset
D31-D24 (byte)	00b	11b
D23-D16 (byte)	01b	10b
D15-D8 (byte)	10b	01b
D7-D0 (byte)	11b	00b
D31-D16 (half-word)	00b	10b
D15-D0 (half-word)	10b	00b
D31-D0 (word)	00b	00b

PCI9056 Setup

PCI9056 registers can be accessed by either the QUICC or the PCI Host (except DMA registers, which can only be accessed by the QUICC). The PCI9056 Configuration Register Select signal (CCS#, driven by +S0) is set to properly decode accesses to internal PCI9056 registers. The allocated register space for the PCI9056 registers is shown in Table 4-2, “Device Address Map,” on page 32. When initialization of PCI9056 registers is complete, the user should set the Local Init Status bit in the PCI9056 “EEPROM Control (not supported on the PCI334A), PCI Command Codes, User I/O Control, Init Control Register.” Until this bit is set, the PCI334A will issue retries to all PCI accesses.

PCI Registers

The PCI registers must be programmed locally from the PROM device, since the serial EEPROM option of the PCI9056 is not used. Until the Local Init Done bit in the PCI9056 Init Control Register is set, indicating the configuration registers have been loaded, PCI cycles will be terminated with retries by the PCI9056. Both Configuration Read (type 0 or 1) and Configuration Write (type 0 or 1) PCI cycles are supported.

Doorbell Registers

There are two 32-bit doorbell interrupt/status registers in the PCI9056. One is assigned to the PCI bus interface, while the other is assigned to the Local bus interface. Doorbell registers are used to pass interrupts between the PCI bus and Local bus.

Mailbox Registers

There are eight 32-bit mailbox registers in the PCI9056. These registers are used to pass command and status information between the PCI Host and the QUICC.

Table 4-7: PCI9056 PCI Configuration Register Addresses

Register	Local Address	Width in Bits	Setting
Device ID	0010.0000h	16	0x334a
Vendor ID	0010.0002h	16	0x1214
Status	0010.0004h	16	0x0280
Command	0010.0006h	16	0x0107
Class Code	0010.0008h	24	0x068000
Revision ID	0010.000bh	8	0x10
BIST	0010.000ch	8	0x00
Header Type	0010.000dh	8	0x00
Latency Timer	0010.000eh	8	0x42
Cache Line Size	0010.000fh	8	0x00
PCI BA Mem Mapped Reg	0010.0010h	32	Host
PCI BA I/O Mapped Reg	0010.0014h	32	Host
PCI BA Local AddrSpace 0	0010.0018h	32	Host
PCI BA Local Exp ROM	0010.0030h	32	Host
Max_lat	0010.003ch	8	0x00
Min Gnt	0010.003dh	8	0x00
Interrupt Pin	0010.003eh	8	0x01

Table 4-8: PCI9056 Local Configuration Register Addresses

Register	Local Address	Width in Bits	Setting
PCI-Local Range	0010.0080h	32	0xff800000
PCI-Local Base	0010.0084h	32	0x00000001
PCI-ROM Range	0010.0090h	32	0xffff0000
PCI-ROM Range	0010.0094h	32	0x0
PCI-Local Desc	0010.0098h	32	0x40030003
DM-PCI Range	0010.009ch	32	0x0
DM-PCI Mem BA	0010.00a0h	32	0x0
DM-PCI Cfg LBA	0010.00a4h	32	0x0
DM-PCI PBA	0010.00a8h	32	0x0
DM-PCI Cfg PCA	0010.00ach	32	0x0

Table 4-9: PCI9056 Shared Run Time Register Addresses

Register	Local Address	Width in Bits	Setting
Mailbox Reg 0	0010.00c0h	32	0x0
Mailbox Reg 1	0010.00c4h	32	0x0
Mailbox Reg 2	0010.00c8h	32	0x0
Mailbox Reg 3	0010.00cch	32	0x0
Mailbox Reg 4	0010.00d0h	32	0x0
Mailbox Reg 5	0010.00d4h	32	0x0
Mailbox Reg 6	0010.00d8h	32	0x0
Mailbox Reg 7	0010.00dch	32	0x0
PCI-Loc Doorbell	0010.00e0h	32	0x0
Loc-PCI Doorbell	0010.00e4h	32	0x0
Interrupt Ctrl/Status	0010.00e8h	32	0x00010100
Misc. Control[1]	0010.00ech	32	0x8801767e

1. Also known as the “EEPROM Control, PCI Command Codes, User I/O Control, Init Control Register.”

Table 4-10: PCI9056 Local DMA Register Addresses

Register	Local Address	Width in Bits	Setting
DMA Ch 0 Mode	0010.0100h	32	0x00000043
DMA0 PCI Addr	0010.0104h	32	0x0
DMA0 Loc Addr	0010.0108h	32	0x0
DMA0 Trans Cnt	0010.010ch	32	0x0
DMA0 Desc Ptr	0010.0110h	32	0x0
DMA Ch 1 Mode	0010.0114h	32	0x00000043
DMA1 PCI Addr	0010.0118h	32	0x0
DMA1 Loc Addr	0010.011ch	32	0x0
DMA1 Trans Cnt	0010.0120h	32	0x0
DMA1 Desc Ptr	0010.0124h	32	0x0
DMA Cmd/Status	0010.0128h	32	0x0
DMA Arb Reg 0	0010.012ch	32	0x0
DMA Arb Reg 1	0010.0130h	32	0x0

Modes of Operation

Direct Master

The PCI334A does not support direct access to the PCI bus by the QUICC. Only DMA accesses may be sourced to the PCI bus as discussed below.

Direct Slave

The PCI334A supports both memory mapped (Memory Read, Memory Read Multiple, Memory Read Line) and I/O mapped (I/O Read) accesses to the Local bus from the PCI bus. The direct slave interface contains a 128-byte Read FIFO and a 256-byte Write FIFO. PCI base address registers are provided in the PCI9056 configuration space to set up the adapter's location in PCI memory and

I/O space. Byte (8-bit), Half-Word (16-bit), and Word (32-bit) accesses are supported to local SRAM, local registers, and the QUICC internal registers.

Setup of the PCI9056 Local Configuration Registers (specifically the Local Address Space 0 / Expansion ROM Bus Region Descriptor) must include enabling the Ready Input and disabling the Bterm input for Memory Space 0. The Burst Enable bit may be set but offers no advantage. All sourced burst accesses from the PCI9056 are broken up into non-burst local accesses by hardware.

DMA Operation

The PCI9056 supports two independent DMA channels capable of transferring data from the Local bus (SRAM) to the PCI bus. Both chaining and non-chaining DMA transfers are supported. DMA channels 0 and 1 both contain 256-byte bi-directional FIFOs. DMAs can generate Memory Read, Memory Write, Memory Read Multiple, and Memory Read Line PCI cycles. Demand mode DMA is not supported.

The DMA registers inside the PCI9056 are accessible only from the Local bus (QUICC). Setup of the PCI9056's Local DMA Registers (specifically the DMA Channel 0 Mode) must include enabling the Ready Input and disabling the Bterm input for both DMA channels. The Burst Enable bit may be set but offers no advantage. All sourced burst accesses from the PCI9056 are broken up into non-burst local accesses by hardware.

PCI User In/Out

The PCI9056 contains two user-defined bits. The User Out bit is an output of the PCI9056 which can be read from the Status Register defined in "Misc. Register," on page 49. The User In bit is an input to the PCI9056 which can be set in the Misc. Register as described in "Misc. Register," on page 49. Both User bits are found in the PCI9056 "EEPROM Control, PCI Command Codes, User I/ O Control, Init Control Register."

Local bus Arbitration Priority

QUICC internal masters have highest priority during arbitration requests, followed by PCI accesses via the PCI9056. The QUICC's CPU32 core has the lowest priority. The arbitration between the CPU32 and QUICC internal masters (such as IDMA or SDMA) is handled internal to the QUICC.

PCI9056 Interrupt Requests

PCI Interrupt Requests

A level A PCI interrupt (INTA#) can be generated from the PCI9056 Local to PCI Doorbell Register, the PCI Interrupt Register, or a PCI9056 master/target abort status condition. The level A PCI Interrupt signal or individual sources of the interrupt can be enabled or disabled through the PCI9056 Interrupt Control/Status Register. This register also provides interrupt status for each source of the interrupt. The PCI Interrupt can be cleared by disabling a source's interrupt enable bit or by clearing the cause of the interrupt.

PCI supports four interrupt levels (A,B,C,D). The level A PCI interrupt is the only PCI interrupt signal supported by the PCI334A. The PCI Interrupt Pin Register in the PCI9056 configuration space indicates the PCI interrupt level used and must be programmed to reflect the use of INTA#.

The PCI Interrupt Register is a programmable latch described in the following table. A PCI interrupt can be generated when bit 31 of this location is set. The interrupt is removed when this bit is cleared. The value of this latch may be read at any time. The PCI Interrupt Register is described in detail in "PCI Interrupt Register," on page 48.

Table 4-11: PCI Interrupt Register Programming Details

Interrupted Device	Interrupt Request Level	Register	Address
PCI	A	PCI Interrupt Register	0010.1200h

PCI to QUICC Interrupt Requests

The PCI9056 PCI to Local Doorbell Register, a PCI BIST interrupt, or a PCI9056 DMA channel interrupt can generate a QUICC level 5 interrupt. The PCI9056 local interrupt pin (LINTO#) or individual sources of the interrupt can be enabled or disabled through the PCI9056 Interrupt Control/Status Register. This register also provides interrupt status for each source of interrupt. The interrupt can be cleared by disabling a source's interrupt enable bit or by clearing the cause of the interrupt.

SRAM Array

The SRAM array has a 32-bit data width and is implemented using four micro ball grid array surface mount components. SRAM control is embedded in the QUICC chip and it provides 1 Wait State (2 clocks @ 25MHz) Read and Write cycle period for MC68360 accesses (for 70-ns SRAM). Memory size is fixed at-4 MB due to factory-installed memory. The presence detect bits are hard coded in a PLD to represent a 4 MB, 70 ns module for software compatibility. They may be read from the Status Register as shown in “Status Register,” on page 47.

See Figure 3-1, “PCI334A Component Layout,” on page 24.

Timing

All SRAM control signals and timing are controlled directly from the QUICC. All timing is set up through the QUICC’s GMR, BRx, and ORx. For SRAM timing information see Table 4-4, “QUICC Access Timing,” on page 34.

Parity

Parity is not supported on SRAM accesses.

Flash PROM

The Flash PROM device is a 512-KB x 8-bit (4-Mb), AM29LV040-90 32-pin 3.3V PLCC device. It is socketed on the board. Updating can be performed by setting the PROM_WE bit in the PROM WE Register as shown in “PROM Write Enable Register,” on page 51 and performing an erase and reprogramming algorithm per the manufacturer’s specifications.

The Flash PROM is not accessible from the PCI Bus. If programming from the host is desired, first transfer the data into local SRAM, then locally program the PROM via the QUICC.

See Figure 3-1, “PCI334A Component Layout,” on page 24.

Line Drivers/Receivers

Line drivers and receivers provide electrical adaptation from TTL levels to the appropriate communications interface signal levels. Currently RS232C, RS422, and V.35 electrical interfaces are available. Serial ports 1-4 are connected to QUICC SCC1-4, respectively. The electrical interface supported by a PCI334A can be read from the Board Configuration Register as shown in “Board Configuration Register,” on page 50.

RS232C

The PCI334A-11890 (RS232C) will service each port with six RS232C inputs and four RS232C outputs. The RS232C drivers/receivers operate up to 100-Kbits/s and meet TIA/EIA-232-F and ITU V.28. Cabling is available with male DB25 DTE connectors to provide an RS232C interface.

RS422 (EIA530 or RS449 cabling)

The PCI334A-11891 (RS422) will service each port with six RS422 inputs and four RS422 outputs. The six inputs for each port are electrically terminated with a resistor network equivalent to 120 ohms between the designated “A” and “B” circuits of each. The RS422 drivers/receivers operate up to 10-Mbits/s. Cabling is available with male DB37 DTE connectors or female DB37 DCE connectors to provide an RS449 interface. The EIA530 interface is supported electrically but cabling with male DB25 DTE connectors is not a standard product.

V.35

The PCI334A-11892 (V.35) will service each port with seven V.35/ Bell 306 inputs and five V.35/ Bell 306 outputs. Four of the seven inputs and three of the five outputs are unbalanced and electrically compatible with V.28 (RS232C). The remaining three inputs and two outputs are balanced but somewhat different from V.11 (RS422). The V.35 drivers/ receivers operate up to 10-Mbits/s. Cabling is available with male M34 DTE connectors to provide a V.35 interface

Clock Steering

For synchronous serial applications, transmit and receive data signals may be accompanied by external transmit and/or receive clock signals. To manage the options for each clock line source and destination, a clock multiplexor is provided. The source and direction of the clocks are set up in the TCSL Register and the RCSL Register as shown in “TCSL Register,” on page 46 and “RCSL Register,” on page 46.

The transmit clock of any channel may be sourced from the QUICC’s transmit clock signals (*TXCx*) or from the serial port’s transmit clock in signal (*TXCIx*).

The receive clock of any serial channel can be sourced from the serial port receive clock signals (*RCLKx*) or can be sourced from an optional clock (*OPTCLK*) at location U17. The user may install a half-size can (through-hole) oscillator module of any desired frequency and tolerance (3.3V part). For diagnostic mode, the receive clock may be sourced from inside the QUICC.

Debug Port

A 3-pin header is provided at P1 for the debug port, which is connected to the QUICC’s SMC1 port. The TTL signals of SMC1 are converted to RS232C voltage levels on-board. This connector is 3-pins 0.025” in diameter, spaced 0.100” apart. Table A-3, “P1 - Debug Port Pin Assignments,” on page 73 indicates the wiring for a console cable to a DB25 connector for the debug port. This console cable (part number 11-160Q053310) is available by special order from Performance Technologies. Please see “Customer Support and Services,” on page 12.

During SMC1 initialization, a break sequence can be enabled to generate an interrupt. If the debug port is left unconnected to a terminal, the QUICC’s SMC1 port will receive all 0s, thus generating break sequences. Therefore, do not enable the break sequence interrupt to prevent unwanted interrupts.

See Figure 3-1, “PCI334A Component Layout,” on page 24.

Optional Logic Analyzer Connections

Locations have been provided for the optional user installation of through-hole header strips for the connection of external test equipment. These are installed on the bottom side of the board. The pinouts and suggested vendor part numbers for these connectors are shown in Table A-6, “Logic Analyzer Connectors Summary,” on page 73.

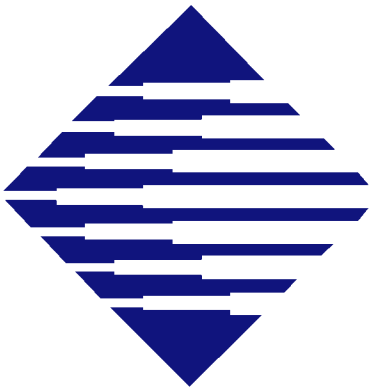

Chapter

5

Registers

Overview

Topics covered in this chapter include:

- “TCSL Register,” on page 46
- “RCSL Register,” on page 46
- “Status Register,” on page 47
- “QUICC Interrupt Register,” on page 48
- “PCI Interrupt Register,” on page 48
- “Misc. Register,” on page 49
- “Board Configuration Register,” on page 50
- “PROM Write Enable Register,” on page 51

Note: *Unused bits in local registers should be written to 0. Unused bits have undefined values during local register reads.*

TCSL Register

The TCSL (transmit clock select) Register provides the PCI334A with control of the source of the transmit clocks for each serial port. The TCSL Register is a 32-bit register located at local address 0011.0200h.

The TCSL Register is readable and writable. The TCSL Register is described in Table 5-1, “TCSL Register,” below.

Table 5-1: TCSL Register

Bit	Mnemonic	Function	Reset Value
31	TCSL1	Transmit Clock Select 1	0
30	TCSL2	Transmit Clock Select 2	0
29	TCSL3	Transmit Clock Select 3	0
28	TCSL4	Transmit Clock Select 4	0
27-0	-	Unused	-

Transmit Clock Select

The Transmit Clock Select (TCSLx) bit controls the source of the port’s transmit clock. When set, the transmit clock is sourced from the serial interface. When the bit is cleared, the transmit clock is sourced from the QUICC’s transmit clock output.

RCSL Register

The RCSL (receive clock select) Register provides the PCI334A with control of the source of the receive clocks for each serial port. The RCSL Register is a 32-bit register located at address 0011.0300h. The RCSL Register is readable and writable. The RCSL Register is described in Table 5-2, “RCSL Register,”below.

Table 5-2: RCSL Register

Bit	Mnemonic	Function	Reset Value
31	RCSL1	Receive Clock Select 1	0
30	RCSL2	Receive Clock Select 2	0
29	RCSL3	Receive Clock Select 3	0
28	RCSL4	Receive Clock Select 4	0
27-0	-	Unused	-

Receive Clock Select

The Receive Clock Select bit controls the source of the port’s receive clock. When set, the receive clock is sourced from the optional oscillator. When the bit is cleared, the receive clock is sourced from the serial interface.

Status Register

The Status Register provides status of on-board signals for monitoring The Status Register is a read only, 32-bit register located at local address 0010.1000h. The Status Register is described in Table 5-3, “Status Register,” below.

Table 5-3: Status Register

Bit	Mnemonic	Function	Reset Value
31	PD4	Presence Detect 4	PD4
30	PD3	Presence Detect 3	PD3
29	PD2	Presence Detect 2	PD2
28	PD1	Presence Detect 1	PD1
27	-	Reserved	1
26	USERO	PCI User Out	1
25	MODE	Mode	MODE
24	-	Reserved	0
23-0	-	Unused	-

Presence Detect

On the PCI334A, the Presence Detect (PD) bits are hard coded in a PLD to represent an uninstalled DRAM SIMM (all PB bits high). Following is some background information describing the original purpose of these bits.

The Presence Detect bits identify the size and speed of DRAM SIMM installed into the SIMM socket. The encoding presented on these pins can be read in Speed and Size fields, where Speed 1, Speed 0, Size 1, and Size 0 correspond to SIMM Presence Detect bits 4, 3, 2, and 1, respectively.

Note: *The encoding of the SIMM presence detect pins can vary from DRAM vendor to vendor.*

Table 5-4, “SIMM Speeds,” and Table 5-5, “SIMM Size,” show typical encoding for the SIMM Presence Detect pins.

Table 5-4: SIMM Speeds

Speed Field	Speed (ns)
0	100
1	80
2	70
3	60

Table 5-5: SIMM Size

Size Field	Size (MB)
0	4
1	2,32
2	1,16
3	8

PCI User Out

The PCI User Out bit indicates the status of the PCI9056 User Out pin. This is a general purpose output of the PCI9056 that is controlled from the PCI9056 “EEPROM Control, PCI Command Codes, User I/O Control, Init Control Register” (PCI9056 configuration space, PCI6Ch, LOC ECh).

Burn-In Mode

The Burn-In Mode bit indicates the status of jumper K2. When the jumper is installed, the Burn-In Mode bit will be clear (0), enabling a mode reserved for the factory if the PT-Bug PROM is installed. When the jumper in not installed, the Burn-In Mode bit will be set (1), indicating normal operation under PT-Bug.

QUICC Interrupt Register

The QUICC Interrupt Register controls the QUICC interrupts. The QUICC Interrupt Register is a 32-bit register located at local address 0010.1100h. The QUICC Interrupt register is readable and writable. The QUICC Interrupt Register is described in Table 5-6, “QUICC Interrupt Register,” below.

Table 5-6: QUICC Interrupt Register

Bit	Mnemonic	Function	Reset Value
31	IR7	QUICC Interrupt Level 7	0
30-24	-	Reserved	0
23-0	-	Unused	-

Interrupt 7

The Interrupt 7 bit (IR7) causes a QUICC level 7 interrupt when set high. Clearing the bit removes the interrupt.

PCI Interrupt Register

The PCI Interrupt Register controls the PCI interrupts. The PCI Interrupt Register is a 32-bit register located at local address 0010.1200h. The PCI Interrupt register is readable and writable. The PCI Interrupt Register is described in Table 5-7, “PCI Interrupt Register,” below.

Table 5-7: PCI Interrupt Register

Bit	Mnemonic	Function	Reset Value
31	PINT	PCI Interrupt	0
30-24	-	Reserved	0
23-0	-	Unused	-

PCI Interrupt

The PCI Interrupt (PINT) bit causes a PCI Interrupt when set. Clearing this bit removes the interrupt. The PCI Interrupt is mapped to PCI INTA#, INTB#, INTC#, or INTD# through the PCI9056 PCI Interrupt Pin Register (PCI9056 configuration space, offset 3Dh). Hardware requires this register must map the PCI Interrupt to INTA#.

Misc. Register

The Misc. Register controls the miscellaneous functions of the PCI334A. The Misc. register is a 32-bit register located at local address 0010.1300h. The Misc. Register is both readable and writable. The Misc. Register is described in Table 5-8, “Misc. Register,” below.

Table 5-8: Misc. Register

Bit	Mnemonic	Function	Reset Value
31	DREQ1	DMA Channel 1 Request (not supported)	0
30	DREQ0	DMA Channel 0 Request (not supported)	0
29	USERI	PCI User In	0
28	-	Reserved	0
27	LED_DIS	LED Disable	1
26-24	-	Reserved	0
23-0	-	Unused	-

PCI User In

The PCI User In (USERI) bit indicates the status of the PCI9056 User In pin. This is a general-purpose input of the PCI9056 that is controlled from the PCI9056 “EEPROM Control, PCI Command Codes, User I/O Control, Init Control Register” (PCI9056 configuration space, PCI6Ch, LOC ECh).

LED Disable

The LED Disable (LED_DIS) bit is connected to the on-board green LED. When set (1), the LED will be disabled (off). When the bit is 0, the LED is on.

Board Configuration Register

The Board Configuration Register is a read only register that includes information on the configuration of the PCI334A. The Board Configuration register is a 32-bit register located at local address 0010.1600h. The Board Configuration is described in Table 5-9, “Board Configuration Register,” below.

Table 5-9: Board Configuration Register

Bit	Mnemonic	Function	Reset Value
31	-	Reserved	0
30	FORM	Mechanical Form Factor	FORM
29	INT2	Electrical Interface 2	INT2
28	INT1	Electrical Interface 1	INT1
27	INT0	Electrical Interface 0	INT0
26	ID2	Revision ID 2	ID2
25	ID1	Revision ID 1	ID1
24	ID0	Revision ID 0	ID0
23-0	-	Unused	-

Mechanical Form Factor

The Mechanical Form Factor of the card is indicated by the Form bit. When set, this indicates the mechanical form factor is PCI (ISA). A low (0) value of this bit is reserved for future use.

Electrical Interface

The Electrical Interface (INT[2:0]) bits indicate the electrical interface supported by the card. Available supported interfaces are listed in Table 5-10, “Electrical Interface ID,” below.

Table 5-10: Electrical Interface ID

Int[2:0]	Interface
000	RS232C
001	RS422 (449/530)
010	V.35
011	Reserved
100	Reserved
101	Reserved
110	Reserved
111	None Installed

Revision ID

The Revision ID (ID[2:0]) bits indicate the revision of the PCI334A. A revision ID of 000 is the lowest ID.

PROM Write Enable Register

The PROM Write Enable Register contains the protection bit for enabling/disabling writing to the PROM. This register also contains the Software ID field. The PROM Write Enable Register is a 32-bit register located at local address 0010.1700h. The PROM Write Enable Register is readable and writable. The PROM Write Enable Register is described in Table 5-11, “PROM Write Enable Register,” below.

Table 5-11: PROM Write Enable Register

Bit	Mnemonic	Function	Reset Value
31	PWE	PROM Write Enable	0
30	-	Reserved	0
29-24	SID	Software ID	000110
23-0	-	Unused	-

PROM Write Enable

The PROM Write Enable (PWE) bit, when set, enables programming of the PROM. When cleared (0), the PROM is a read only device.

Software ID

This is 6 (decimal) for the PCI334A.

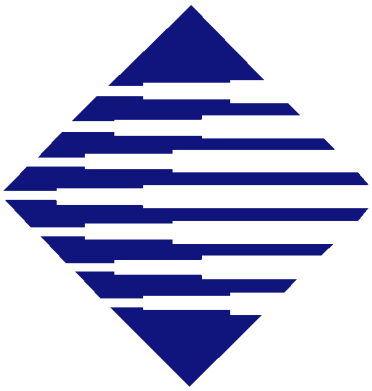

Chapter

6

QUICC I/O Ports

Overview

The QUICC has three general-purpose I/O ports A, B and C. Each pin in I/O ports may be configured as a general-purpose I/O pin or as a dedicated peripheral interface pin. The PCI334A design uses these ports as described below.

Topics covered in this chapter include:

- “QUICC Port A,” on page 54
- “QUICC Port B,” on page 55
- “QUICC Port C,” on page 56

QUICC Port A

Assignment of Port A pins including their direction is accomplished by configuring the PAPAR, PADIR, and PAODR registers on the QUICC. An example configuration for Port A is shown in Table 6-1, “Port A Configuration Settings,” below.

Table 6-1: Port A Configuration Settings

QUICC Register	QUICC Address	Value
PAPAR	0004.1552h	0xffff
PADIR	0004.1550h	0x5500
PAODR	0004.1554h	0x0000
PADAT	0004.1556h	Value

The PCI334A uses Port A on the QUICC for serial port transmit and receive clocks and data. Bit assignments are shown in Table 6-2, “QUICC Port A Mapping (16-bit),” may be configured as either inputs or outputs. The definition is dependent upon the clock steering settings for transmit clocks.

The Direction column in Table 6-2 indicates the direction of the signal with respect to the QUICC.

Table 6-2: QUICC Port A Mapping (16-bit)

QUICC pin/cell	Use	Signal Name	QUICC Name	Direction
PA00	Receive Data Port 1	RXD1	RXD1	I
PA01	Transmit Data Port 1	TXD1	TXD1	O
PA02	Receive Data Port 2	RXD2	RXD2	I
PA03	Transmit Data Port 2	TXD2	TXD2	O
PA04	Receive Data Port 3	RXD3	RXD3	I
PA05	Transmit Data Port 3	TXD3	TXD3	O
PA06	Receive Data Port 4	RXD4	RXD4	I
PA07	Transmit Data Port 4	TXD4	TXD4	O
PA08	Transmit Clock Port 1	TXC1	CLK1/BRG01	I/O
PA09	Receive Clock Port 1	RXC1	CLK2	I
PA10	Transmit Clock Port 2	TXC2	CLK3/BRG02	I/O
PA11	Receive Clock Port 2	RXC2	CLK4	I
PA12	Transmit Clock Port 3	TXC3	CLK5/BRG03	I/O
PA13	Receive Clock Port 3	RXC3	CLK6	I
PA14	Transmit Clock Port 4	TXC4	CLK7/BRG04	I/O
PA15	Receive Clock Port 4	RXC4	CLK8	I

QUICC Port B

Assignment of Port B pins including their direction is accomplished by configuring the PBPAR, PBDIR, and PBODR registers on the QUICC. An example configuration for Port B is shown in Table 6-3, “Port B Configuration Settings,” below.

Table 6-3: Port B Configuration Settings

QUICC Register	QUICC Address	Value
PBPAR	0004.16bch	0x0000
PBDIR	0004.16b8h	0xf00f
PBODR	0004.16c2h	0x0000
PBDAT	0004.16c4h	Value

The PCI334A uses Port B on the QUICC for modem control signals and the debug port transmit and receive signals. Bit assignments are shown in Table 6-4, “QUICC Port B Mapping (18-bit),” on page 55. RTS signals may be configured as a dedicated signal used by the QUICC’s SCC or as a general purpose output pin. The Direction column in Table 6-4 indicates the direction of the signal with respect to the QUICC.

Table 6-4: QUICC Port B Mapping (18-bit)

QUICC pin/cell	Use	Signal Name	QUICC Name	Direction
PB00	Line Test Port 1 (V.35 only)	LT1	PORT B0	O
PB01	Line Test Port 2 (V.35 only)	LT2	PORT B1	O
PB02	Line Test Port 3 (V.35 only)	LT3	PORT B2	O
PB03	Line Test Port 4 (V.35 only)	LT4	PORT B3	O
PB04	Data Set Ready Port 1	DSR1	PORT B4	I
PB05	Data Set Ready Port 2	DSR2	PORT B5	I
PB06	Debug Port Transmit Data	TXD	SMTXD1	I
PB07	Debug Port Receive Data	RXD	SMRXD1	O
PB08	Data Set Ready Port 3	DSR3	PORT B8	I
PB09	Data Set Ready Port 4	DSR4	PORT B9	I
PB10	Ring Indicator Port 1 (V.35 only)	RI1	PORT B10	I
PB11	Ring Indicator Port 2 (V.35 only)	RI2	PORT B11	I
PB12	Request To Send Port 1	RTS1	PORT B12/RTS1	O
PB13	Request To Send Port 2	RTS2	PORT B13/RTS2	O
PB14	Request To Send Port 3	RTS3	PORT B14/RTS3	O
PB15	Request To Send Port 4	RTS4	PORT B15/RTS4	O
PB16	Ring Indicator Port 3 (V.35 only)	RI3	PORT B16	I
PB17	Ring Indicator Port 4 (V.35 only)	RI4	PORT B17	I

QUICC Port C

Assignment of Port C pins including their direction is accomplished by configuring the PCPAR, PCDIR, PCSO, and PCINT registers on the QUICC. An example configuration for Port C is shown in Table 6-5, “Port C Configuration Settings,” below. Each of the Port C pins may be programmed individually to cause an interrupt to the QUICC CPU32 core as described in the MC68360 User’s Manual.

Table 6-5: Port C Configuration Settings

QUICC Register	QUICC Address	Value
PCPAR	0004.1562h	0x0000
PCDIR	0004.1560h	0x000f
PCSO	0004.1564h	0x0000
PCDAT	0004.1566h	Value
PCINT	0004.1568h	0x0000

The PCI334A uses Port C on the QUICC for modem control signals. The assignment of Port C pins is defined in Table 6-6, “QUICC Port C Pin Mapping (12-bit),” below. CTS and DCD signals may be configured as dedicated signals used by the QUICC’s SCC or as general-purpose output pins. The Direction column in Table 6-6 indicates the direction of the signal with respect to the QUICC.

Table 6-6: QUICC Port C Pin Mapping (12-bit)

QUICC pin/cell	Use	Signal Name	QUICC Name	Direction
PC00	Data Terminal Ready Port 1	DTR1	PORT C0	O
PC01	Data Terminal Ready Port 2	DTR2	PORT C1	O
PC02	Data Terminal Ready Port 3	DTR3	PORT C2	O
PC03	Data Terminal Ready Port 4	DTR4	PORT C3	O
PC04	Clear To Send Port 1	CTS1	PORT C4/CTS1	I
PC05	Data Carrier Detect Port 1	DCD1	PORT C5/CD1	I
PC06	Clear To Send Port 2	CTS2	PORT C6/CTS2	I
PC07	Data Carrier Detect Port 2	DCD2	PORT C7/CD2	I
PC08	Clear To Send Port 3	CTS3	PORT C8/CTS3	I
PC09	Data Carrier Detect Port 3	DCD3	PORT C9/CD3	I
PC10	Clear To Send Port 4	CTS4	PORT C10/ CTS4	I
PC11	Data Carrier Detect Port 4	DCD4	PORT C11/CD4	I

Chapter

7

Connector and Cabling

Overview

All versions of the PCI334A have an 80-pin Amplimite connector providing the signals for all four serial ports. The pinout of the Amplimite connector is described in the cabling sections below. See Figure 3-1, “PCI334A Component Layout,” on page 24 for connector location.

Topics covered in this chapter include:

- “RS232C Cabling,” on page 58
- “RS449 Cabling,” on page 60
- “EIA530 Cabling,” on page 63
- “V.35 Cabling,” on page 66

RS232C Cabling

A shielded, hydra-style breakout cable providing four 25-pin, D-shell (DB25) DTE (pins) connectors is available for the PCI334A-11890 (RS232C) version. The pin assignments for the cabling and connectors are shown in Table 7-1, “RS232C Connector Pin Assignments,” below.

Table 7-1: RS232C Connector Pin Assignments

80-Pin No.	Signal Name	RS232C Mnemonic	RS232C DB25 Pin No.	Description
1	RXD1	BB	3	Port 1 Receive Data
2			16	
3	DTR1	CD	20	Port 1 Data Terminal Ready
4			23	
5	TXD1	BA	2	Port 1 Transmit Data
6			14	
7	RTS1	CA	4	Port 1 Request To Send
8			19	
9	TXC1	DA	24	Port 1 Transmit Clock
10			11	
11	TXCI1	DB	15	Port 1 Transmit Clock In
12			12	
13	DCD1	CF	8	Port 1 Data Carrier Detect
14			10	
15	DSR1	CC	6	Port 1 Data Set Ready
16			22	
17	CTS1	CB	5	Port 1 Clear To Send
18	GND1	AB	7	Port 1 Signal Ground
19	RXC1	DD	17	Port 1 Receive Clock
20			9	
21	RXD2	BB	3	Port 2 Receive Data
22			16	
23	DTR2	CD	20	Port 2 Data Terminal Ready
24			23	
25	TXD2	BA	2	Port 2 Transmit Data
26			14	
27	RTS2	CA	4	Port 2 Request To Send
28			19	
29	TXC2	DA	24	Port 2 Transmit Clock
30			11	
31	TXCI2	DB	15	Port 2 Transmit Clock In
32			12	
33	DCD2	CF	8	Port 2 Data Carrier Detect
34			10	
35	DSR2	CC	6	Port 2 Data Set Ready
36			22	
37	CTS2	CB	5	Port 2 Clear To Send

Table 7-1: RS232C Connector Pin Assignments (Continued)

80-Pin No.	Signal Name	RS232C Mnemonic	RS232C DB25 Pin No.	Description
38	GND2	AB	7	Port 2 Signal Ground
39	RXC2	DD	17	Port 2 Receive Clock
40			9	
41	RXD3	BB	3	Port 3 Receive Data
42			16	
43	DTR3	CD	20	Port 3 Data Terminal Ready
44			23	
45	TXD3	BA	2	Port 3 Transmit Data
46			14	
47	RTS3	CA	4	Port 3 Request To Send
48			19	
49	TXC3	DA	24	Port 3 Transmit Clock
50			11	
51	TXCI3	DB	15	Port 3 Transmit Clock In
52			12	
53	DCD3	CF	8	Port 3 Data Carrier Detect
54			10	
55	DSR3	CC	6	Port 3 Data Set Ready
56			22	
57	CTS3	CB	5	Port 3 Clear To Send
58	GND3	AB	7	Port 3 Signal Ground
59	RXC3	DD	17	Port 3 Receive Clock
60			9	
61	RXD4	BB	3	Port 4 Receive Data
62			16	
63	DTR4	CD	20	Port 4 Data Terminal Ready
64			23	
65	TXD4	BA	2	Port 4 Transmit Data
66			14	
67	RTS4	CA	4	Port 4 Request To Send
68			19	
69	TXC4	DA	24	Port 4 Transmit Clock
70			11	
71	TXCI4	DB	15	Port 4 Transmit Clock In
72			12	
73	DCD4	CF	8	Port 4 Data Carrier Detect
74			10	
75	DSR4	CC	6	Port 4 Data Set Ready
76			22	
77	CTS4	CB	5	Port 4 Clear To Send
78	GND4	AB	7	Port 4 Signal Ground
79	RXC4	DD	17	Port 4 Receive Clock
80			9	

RS449 Cabling

A shielded, hydra-style breakout cable providing four 37-pin, D-shell (DB37) DTE (pins) with male connectors are supplied with the PCI334A-11891 (RS449) version. Since there were not enough wires to create the SG (Pin 19) connections please use Shield Ground (Pin 1) of the DB37 connector for this signal. The pin assignments for the cabling and connectors are shown in Table 7-2, “RS449 Connector Pin Assignments,” below.

Table 7-2: RS449 Connector Pin Assignments

80-Pin No.	Signal Name	RS449 Mnemonic	RS449 DB37 Pin No.	Description
1	RXD1(A)	RD(A)	6	Port 1 Receive Data
2	RXD1(B)	RD(B)	24	Port 1 Receive Data
3	DTR1(A)	TR(A)	12	Port 1 Data Terminal Ready
4	DTR1(B)	TR(B)	30	Port 1 Data Terminal Ready
5	TXD1(A)	SD(A)	4	Port 1 Transmit Data
6	TXD1(B)	SD(B)	22	Port 1 Transmit Data
7	RTS1(A)	RS(A)	7	Port 1 Request To Send
8	RTS1(B)	RS(B)	25	Port 1 Request To Send
9	TXC1(A)	TT(A)	17	Port 1 Transmit Clock
10	TXC1(B)	TT(B)	35	Port 1 Transmit Clock
11	TXCI1(A)	ST(A)	5	Port 1 Transmit Clock In
12	TXCI1(B)	ST(B)	23	Port 1 Transmit Clock In
13	DCD1(A)	RR(A)	13	Port 1 Data Carrier Detect
14	DCD1(B)	RR(B)	31	Port 1 Data Carrier Detect
15	DSR1(A)	DM(A)	11	Port 1 Data Set Ready
16	DSR1(B)	DM(B)	29	Port 1 Data Set Ready
17	CTS1(A)	CS(A)	9	Port 1 Clear To Send
18	CTS1(B)	CS(B)	27	Port 1 Clear To Send
19	RXC1(A)	RT(A)	8	Port 1 Receive Clock
20	RXC1(B)	RT(B)	26	Port 1 Receive Clock
Shield Ground	SG	SG	1	Port 1 Shield Ground and Signal Ground
21	RXD2(A)	RD(A)	6	Port 2 Receive Data
22	RXD2(B)	RD(B)	24	Port 2 Receive Data
23	DTR2(A)	TR(A)	12	Port 2 Data Terminal Ready
24	DTR2(B)	TR(B)	30	Port 2 Data Terminal Ready
25	TXD2(A)	SD(A)	4	Port 2 Transmit Data
26	TXD2(B)	SD(B)	22	Port 2 Transmit Data
27	RTS2(A)	RS(A)	7	Port 2 Request To Send
28	RTS2(B)	RS(B)	25	Port 2 Request To Send
29	TXC2(A)	TT(A)	17	Port 2 Transmit Clock
30	TXC2(B)	TT(B)	35	Port 2 Transmit Clock
31	TXCI2(A)	ST(A)	5	Port 2 Transmit Clock In

Table 7-2: RS449 Connector Pin Assignments (Continued)

80-Pin No.	Signal Name	RS449 Mnemonic	RS449 DB37 Pin No.	Description
32	TXCI2(B)	ST(B)	23	Port 2 Transmit Clock In
33	DCD2(A)	RR(A)	13	Port 2 Data Carrier Detect
34	DCD2(B)	RR(B)	31	Port 2 Data Carrier Detect
35	DSR2(A)	DM(A)	11	Port 2 Data Set Ready
36	DSR2(B)	DM(B)	29	Port 2 Data Set Ready
37	CTS2(A)	CS(A)	9	Port 2 Clear To Send
38	CTS2(B)	CS(B)	27	Port 2 Clear To Send
39	RXC2(A)	RT(A)	8	Port 2 Receive Clock
40	RXC2(B)	RT(B)	26	Port 2 Receive Clock
Shield Ground	SG	SG	1	Port 2 Shield Ground and Signal Ground
41	RXD3(A)	RD(A)	6	Port 3 Receive Data
42	RXD3(B)	RD(B)	24	Port 3 Receive Data
43	DTR3(A)	TR(A)	12	Port 3 Data Terminal Ready
44	DTR3(B)	TR(B)	30	Port 3 Data Terminal Ready
45	TXD3(A)	SD(A)	4	Port 3 Transmit Data
46	TXD3(B)	SD(B)	22	Port 3 Transmit Data
47	RTS3(A)	RS(A)	7	Port 3 Request To Send
48	RTS3(B)	RS(B)	25	Port 3 Request To Send
49	TXC3(A)	TT(A)	17	Port 3 Transmit Clock
50	TXC3(B)	TT(B)	35	Port 3 Transmit Clock
51	TXCI3(A)	ST(A)	5	Port 3 Transmit Clock In
52	TXCI3(B)	ST(B)	23	Port 3 Transmit Clock In
53	DCD3(A)	RR(A)	13	Port 3 Data Carrier Detect
54	DCD3(B)	RR(B)	31	Port 3 Data Carrier Detect
55	DSR3(A)	DM(A)	11	Port 3 Data Set Ready
56	DSR3(B)	DM(B)	29	Port 3 Data Set Ready
57	CTS3(A)	CS(A)	9	Port 3 Clear To Send
58	CTS3(B)	CS(B)	27	Port 3 Clear To Send
59	RXC3(A)	RT(A)	8	Port 3 Receive Clock
60	RXC3(B)	RT(B)	26	Port 3 Receive Clock
Shield Ground	SG	SG	1	Port 3 Shield Ground and Signal Ground
61	RXD4(A)	RD(A)	6	Port 4 Receive Data
62	RXD4(B)	RD(B)	24	Port 4 Receive Data
63	DTR4(A)	TR(A)	12	Port 4 Data Terminal Ready
64	DTR4(B)	TR(B)	30	Port 4 Data Terminal Ready
65	TXD4(A)	SD(A)	4	Port 4 Transmit Data
66	TXD4(B)	SD(B)	22	Port 4 Transmit Data
67	RTS4(A)	RS(A)	7	Port 4 Request To Send

Table 7-2: RS449 Connector Pin Assignments (Continued)

80-Pin No.	Signal Name	RS449 Mnemonic	RS449 DB37 Pin No.	Description
68	RTS4(B)	RS(B)	25	Port 4 Request To Send
69	TXC4(A)	TT(A)	17	Port 4 Transmit Clock
70	TXC4(B)	TT(B)	35	Port 4 Transmit Clock
71	TXCI4(A)	ST(A)	5	Port 4 Transmit Clock In
72	TXCI4(B)	ST(B)	23	Port 4 Transmit Clock In
73	DCD4(A)	RR(A)	13	Port 4 Data Carrier Detect
74	DCD4(B)	RR(B)	31	Port 4 Data Carrier Detect
75	DSR4(A)	DM(A)	11	Port 4 Data Set Ready
76	DSR4(B)	DM(B)	29	Port 4 Data Set Ready
77	CTS4(A)	CS(A)	9	Port 4 Clear To Send
78	CTS4(B)	CS(B)	27	Port 4 Clear To Send
79	RXC4(A)	RT(A)	8	Port 4 Receive Clock
80	RXC4(B)	RT(B)	26	Port 4 Receive Clock
Shield Ground	SG	SG	1	Port 4 Shield Ground and Signal Ground

EIA530 Cabling

The following EIA530 (RS530) pinout table is provided so that the user can configure their own cable if they need to connect to another EIA530 device. This information is for reference only since the EIA530 cable is not available as a standard product. The pin assignments for a possible shielded, hydra-style breakout cable providing four 25-pin, D-shell (DB25) DTE (pins) connectors are shown in Table 7-3, “EIA530 Connector Pin Assignments,” below.

Table 7-3: EIA530 Connector Pin Assignments

80-Pin No.	Signal Name	EIA530 Mnemonic	EIA530 DB25 Pin No.	Description
1	RXD1-	BB(A)	3	Port 1 Receive Data
2	RXD1+	BB(B)	16	Port 1 Receive Data
3	DTR1-	CD(A)	20	Port 1 Data Terminal Ready
4	DTR1+	CD(B)	23	Port 1 Data Terminal Ready
5	TXD1-	BA(A)	2	Port 1 Transmit Data
6	TXD1+	BA(B)	14	Port 1 Transmit Data
7	RTS1-	CA(A)	4	Port 1 Request To Send
8	RTS1+	CA(B)	19	Port 1 Request To Send
9	TXC1-	DA(A)	24	Port 1 Transmit Clock
10	TXC1+	DA(B)	11	Port 1 Transmit Clock
11	TXCI1-	DB(A)	15	Port 1 Transmit Clock In
12	TXCI1+	DB(B)	12	Port 1 Transmit Clock In
13	DCD1-	CF(A)	8	Port 1 Data Carrier Detect
14	DCD1+	CF(B)	10	Port 1 Data Carrier Detect
15	DSR1-	CC(A)	6	Port 1 Data Set Ready
16	DSR1+	CC(B)	22	Port 1 Data Set Ready
17	CTS1-	CB(A)	5	Port 1 Clear To Send
18	CTS1+	CB(B)	13	Port 1 Clear To Send
19	RXC1-	DD(A)	17	Port 1 Receive Clock
20	RXC1+	DD(B)	9	Port 1 Receive Clock
21	RXD2-	BB(A)	3	Port 2 Receive Data
22	RXD2+	BB(B)	16	Port 2 Receive Data
23	DTR2-	CD(A)	20	Port 2 Data Terminal Ready
24	DTR2+	CD(B)	23	Port 2 Data Terminal Ready
25	TXD2-	BA(A)	2	Port 2 Transmit Data
26	TXD2+	BA(B)	14	Port 2 Transmit Data
27	RTS2-	CA(A)	4	Port 2 Request To Send
28	RTS2+	CA(B)	19	Port 2 Request To Send
29	TXC2-	DA(A)	24	Port 2 Transmit Clock
30	TXC2+	DA(B)	11	Port 2 Transmit Clock
31	TXCI2-	DB(A)	15	Port 2 Transmit Clock In
32	TXCI2+	DB(B)	12	Port 2 Transmit Clock In
33	DCD2-	CF(A)	8	Port 2 Data Carrier Detect

Table 7-3: EIA530 Connector Pin Assignments (Continued)

80-Pin No.	Signal Name	EIA530 Mnemonic	EIA530 DB25 Pin No.	Description
34	DCD2+	CF(B)	10	Port 2 Data Carrier Detect
35	DSR2-	CC(A)	6	Port 2 Data Set Ready
36	DSR2+	CC(B)	22	Port 2 Data Set Ready
37	CTS2-	CB(A)	5	Port 2 Clear To Send
38	CTS2+	CB(B)	13	Port 2 Clear To Send
39	RXC2-	DD(A)	17	Port 2 Receive Clock
40	RXC2+	DD(B)	9	Port 2 Receive Clock
41	RXD3-	BB(A)	3	Port 3 Receive Data
42	RXD3+	BB(B)	16	Port 3 Receive Data
43	DTR3-	CD(A)	20	Port 3 Data Terminal Ready
44	DTR3+	CD(B)	23	Port 3 Data Terminal Ready
45	TXD3-	BA(A)	2	Port 3 Transmit Data
46	TXD3+	BA(B)	14	Port 3 Transmit Data
47	RTS3-	CA(A)	4	Port 3 Request To Send
48	RTS3+	CA(B)	19	Port 3 Request To Send
49	TXC3-	DA(A)	24	Port 3 Transmit Clock
50	TXC3+	DA(B)	11	Port 3 Transmit Clock
51	TXCI3-	DB(A)	15	Port 3 Transmit Clock In
52	TXCI3+	DB(B)	12	Port 3 Transmit Clock In
53	DCD3-	CF(A)	8	Port 3 Data Carrier Detect
54	DCD3+	CF(B)	10	Port 3 Data Carrier Detect
55	DSR3-	CC(A)	6	Port 3 Data Set Ready
56	DSR3+	CC(B)	22	Port 3 Data Set Ready
57	CTS3-	CB(A)	5	Port 3 Clear To Send
58	CTS3+	CB(B)	13	Port 3 Clear To Send
59	RXC3-	DD(A)	17	Port 3 Receive Clock
60	RXC3+	DD(B)	9	Port 3 Receive Clock
61	RXD4-	BB(A)	3	Port 4 Receive Data
62	RXD4+	BB(B)	16	Port 4 Receive Data
63	DTR4-	CD(A)	20	Port 4 Data Terminal Ready
64	DTR4+	CD(B)	23	Port 4 Data Terminal Ready
65	TXD4-	BA(A)	2	Port 4 Transmit Data
66	TXD4+	BA(B)	14	Port 4 Transmit Data
67	RTS4-	CA(A)	4	Port 4 Request To Send
68	RTS4+	CA(B)	19	Port 4 Request To Send
69	TXC4-	DA(A)	24	Port 4 Transmit Clock
70	TXC4+	DA(B)	11	Port 4 Transmit Clock
71	TXCI4-	DB(A)	15	Port 4 Transmit Clock In
72	TXCI4+	DB(B)	12	Port 4 Transmit Clock In
73	DCD4-	CF(A)	8	Port 4 Data Carrier Detect

Table 7-3: EIA530 Connector Pin Assignments (Continued)

80-Pin No.	Signal Name	EIA530 Mnemonic	EIA530 DB25 Pin No.	Description
74	DCD4+	CF(B)	10	Port 4 Data Carrier Detect
75	DSR4-	CC(A)	6	Port 4 Data Set Ready
76	DSR4+	CC(B)	22	Port 4 Data Set Ready
77	CTS4-	CB(A)	5	Port 4 Clear To Send
78	CTS4+	CB(B)	13	Port 4 Clear To Send
79	RXC4-	DD(A)	17	Port 4 Receive Clock
80	RXC4+	DD(B)	9	Port 4 Receive Clock

V.35 Cabling

A shielded, hydra-style breakout cable providing four M-34, DTE (pins) connectors is available for the PCI334A-11892 (V.35) version. The pin assignments for the cabling and connector are shown in Table 7-4, “V.35 Connector Pin Assignments,” below.

Table 7-4: V.35 Connector Pin Assignments

80-Pin No.	Signal Name	V.35 Mnemonic	M-34 Pin No.	Description
1	RXD1(A)	104	R	Port 1 Receive Data
2	RXD1(B)	104	T	Port 1 Receive Data
3	DTR1	108	H	Port 1 Data Terminal Ready
4				
5	TXD1(A)	103	P	Port 1 Transmit Data
6	TXD1(B)	103	S	Port 1 Transmit Data
7	RTS1	105	C	Port 1 Request To Send
8	GND1	102	B	Port 1 Signal Ground
9	TXC1(A)	113	U	Port 1 Transmit Clock
10	TXC1(B)	113	W	Port 1 Transmit Clock
11	TXCI1(A)	114	Y	Port 1 Transmit Clock In
12	TXCI1(B)	114	AA	Port 1 Transmit Clock In
13	DCD1	109	F	Port 1 Data Carrier Detect
14	RI1	125	J	Port 1 Ring Indicator
15	DSR1	107	E	Port 1 Data Set Ready
16	LT1		K	Port 1 Line Test
17	CTS1	106	D	Port 1 Clear To Send
18				
19	RXC1(A)	115	V	Port 1 Receive Clock
20	RXC1(B)	115	X	Port 1 Receive Clock
21	RXD2(A)	104	R	Port 2 Receive Data
22	RXD2(B)	104	T	Port 2 Receive Data
23	DTR2	108	H	Port 2 Data Terminal Ready
24				
25	TXD2(A)	103	P	Port 2 Transmit Data
26	TXD2(B)	103	S	Port 2 Transmit Data
27	RTS2-	105	C	Port 2 Request To Send
28	GND2	102	B	Port 2 Signal Ground
29	TXC2(A)	113	U	Port 2 Transmit Clock
30	TXC2(B)	113	W	Port 2 Transmit Clock
31	TXCI2(A)	114	Y	Port 2 Transmit Clock In
32	TXCI2(B)	114	AA	Port 2 Transmit Clock In
33	DCD2	109	F	Port 2 Data Carrier Detect
34	RI2	125	J	Port 2 Ring Indicator
35	DSR2	107	E	Port 2 Data Set Ready

Table 7-4: V.35 Connector Pin Assignments

80-Pin No.	Signal Name	V.35 Mnemonic	M-34 Pin No.	Description
36	LT2		K	Port 2 Line Test
37	CTS2	106	D	Port 2 Clear To Send
38				
39	RXC2(A)	115	V	Port 2 Receive Clock
40	RXC2(B)	115	X	Port 2 Receive Clock
41	RXD3(A)	104	R	Port 3 Receive Data
42	RXD3(B)	104	T	Port 3 Receive Data
43	DTR3	108	H	Port 3 Data Terminal Ready
44				
45	TXD3(A)	103	P	Port 3 Transmit Data
46	TXD3(B)	103	S	Port 3 Transmit Data
47	RTS3	105	C	Port 3 Request To Send
48	GND3	102	B	Port 3 Signal Ground
49	TXC3(A)	113	U	Port 3 Transmit Clock
50	TXC3(B)	113	W	Port 3 Transmit Clock
51	TXCI3(A)	114	Y	Port 3 Transmit Clock In
52	TXCI3(B)	114	AA	Port 3 Transmit Clock In
53	DCD3	109	F	Port 3 Data Carrier Detect
54	RI3	125	J	Port 3 Ring Indicator
55	DSR3	107	E	Port 3 Data Set Ready
56	LT3		K	Port 3 Line Test
57	CTS3	106	D	Port 3 Clear To Send
58				
59	RXC3(A)	115	V	Port 3 Receive Clock
60	RXC3(B)	115	X	Port 3 Receive Clock
61	RXD4(A)	104	R	Port 4 Receive Data
62	RXD4(B)	104	T	Port 4 Receive Data
63	DTR4	108	H	Port 4 Data Terminal Ready
64				
65	TXD4(A)	103	P	Port 4 Transmit Data
66	TXD4(B)	103	S	Port 4 Transmit Data
67	RTS4	105	C	Port 4 Request To Send
68	GND4	102	B	Port 4 Signal Ground
69	TXC4(A)	113	U	Port 4 Transmit Clock
70	TXC4(B)	113	W	Port 4 Transmit Clock
71	TXCI4(A)	114	Y	Port 4 Transmit Clock In
72	TXCI4(B)	114	AA	Port 4 Transmit Clock In
73	DCD4	109	F	Port 4 Data Carrier Detect
74	RI4	125	J	Port 4 Ring Indicator
75	DSR4	107	E	Port 4 Data Set Ready

Table 7-4: V.35 Connector Pin Assignments

80-Pin No.	Signal Name	V.35 Mnemonic	M-34 Pin No.	Description
76	LT4		K	Port 4 Line Test
77	CTS4	106	D	Port 4 Clear To Send
78				
79	RXC4(A)	115	V	Port 4 Receive Clock
80	RXC4(B)	115	X	Port 4 Receive Clock

Appendix

A

Connector Pinouts

Overview

This appendix presents the pin assignments for the various factory-installed and optional PCI334A connectors. See Figure 3-1, “PCI334A Component Layout,” on page 24 for connector location.

Topics covered in this chapter include:

Factory-Installed Connectors

- “P4 - PCI Connector,” on page 70
- “J1 - 80-pin Connector,” on page 72
- “P1 - Debug Port,” on page 73
- “P2 - BDM Connector,” on page 73
- “Altera ISP Connector,” on page 73

Optional Logic Analyzer Connectors

- “P5 - Control,” on page 74
- “P6 - Data,” on page 75
- “P7 - Address,” on page 74
- “P8 - Clock,” on page 75

Factory-Installed Connectors

P4 - PCI Connector

Table A-1: P4 - PCI Connector Pin Assignments

Pin Number	Side B Signal Name	Side A Signal Name
1	nc {-12V}	nc {TRST#}
2	nc {TCK}	nc {+12V}
3	GND	nc {TMS}
4	TDO	TDI
5	+5V	+5V
6	+5V	INTA#
7	nc {INTB#}	nc {INTC#}
8	nc {INTD#}	+5V
9	PRSNT1#	reserved
10	reserved	VIO
11	PRSNT2#	reserved
12	Connector Keyway	Connector Keyway
13	Connector Keyway	Connector Keyway
14	reserved	reserved {3.3Vaux}
15	GND	RST#
16	CLK	VIO
17	GND	GNT#
18	REQ#	GND
19	VIO	reserved {PME#}
20	AD[31]	AD[30]
21	AD[29]	+3.3V
22	GND	AD[28]
23	AD[27]	AD[26]
24	AD[25]	GND
25	+3.3V	AD[24]
26	C/BE[3]#	IDSEL
27	AD[23]	+3.3V
28	GND	AD[22]
29	AD[21]	AD[20]
30	AD[19]	GND
31	+3.3V	AD[18]
32	AD[17]	AD[16]
33	C/BE[2]#	+3.3V
34	GND	FRAME#
35	IRDY#	GND
36	+3.3V	TRDY#

Table A-1: P4 - PCI Connector Pin Assignments (Continued)

Pin Number	Side B Signal Name	Side A Signal Name
37	DEVSEL#	GND
38	PCIXCAP {GND}	STOP#
39	LOCK#	+3.3V
40	PERR#	nc {SDONE}
41	+3.3V	nc {SBO#}
42	SERR#	GND
43	+3.3V	PAR
44	C/BE[1]#	AD[15]
45	AD[14]	+3.3V
46	GND	AD[13]
47	AD[12]	AD[11]
48	AD[10]	GND
49	M66EN {pulled up to VIO}	AD[09]
50	Connector Keyway	Connector Keyway
51	Connector Keyway	Connector Keyway
52	AD[08]	C/BE[0]#
53	AD[07]	+3.3V
54	+3.3V	AD[06]
55	AD[05]	AD[04]
56	AD[03]	GND
57	GND	AD[02]
58	AD[01]	AD[00]
59	VIO	VIO
60	nc {ACK64#}	nc {REQ64#}
61	+5V	+5V
62	+5V	+5V

J1 - 80-pin Connector

Table A-2: J1 - High Density 80-pin Connector Pin Assignments

Signal Name	Pin Number				Signal Name
RXC4+		80		40	RXC2+
RXC4-	79		39		RXC2-
CTS4+		78		38	CTS2+
CTS4-	77		37		CTS2-
DSR4+		76		36	DSR2+
DSR4-	75		35		DSR2-
DCD4+		74		34	DCD2+
DCD4-	73		33		DCD2-
TXCI4+		72		32	TXCI2+
TXCI4-	71		31		TXCI2-
TXC4+		70		30	TXC2+
TXC4-	69		29		TXC2-
RTS4+		68		28	RTS2+
RTS4-	67		27		RTS2-
TXD4+		66		26	TXD2+
TXD4-	65		25		TXD2-
DTR4+		64		24	DTR2+
DTR4-	63		23		DTR2-
RXD4+		62		22	RXD2+
RXD4-	61		21		RXD2-
RXC3+		60		20	RXC1+
RXC3-	59		19		RXC1-
CTS3+		58		18	CTS1+
CTS3-	57		17		CTS1-
DSR3+		56		16	DSR1+
DSR3-	55		15		DSR1-
DCD3+		54		14	DCD1+
DCD3-	53		13		DCD1-
TXCI3+		52		12	TXCI1+
TXCI3-	51		11		TXCI1-
TXC3+		50		10	TXC1+
TXC3-	49		9		TXC1-
RTS3+		48		8	RTS1+
RTS3-	47		7		RTS1-
TXD3+		46		6	TXD1+
TXD3-	45		5		TXD1-
DTR3+		44		4	DTR1+
DTR3-	43		3		DTR1-
RXD3+		42		2	RXD1+
RXD3-	41		1		RXD1-

P1 - Debug Port

Table A-3: P1 - Debug Port Pin Assignments

Signal Name	Header Pin No.	DB25 Pin No.
TXD	1	2
RXD	2	3
GROUND	3	7

P2 - BDM Connector

Table A-4: P2 - BDM Connector Pin Assignments

Pin Number	Signal Name	Signal Name	Pin Number
1	-QDS	-BERR	2
3	GND	-BKPT	4
5	GND	+FREEZE	6
7	-RESETH	-IFETCH	8
9	V3V	-IPIPEO	10

Altera ISP Connector

Table A-5: Altera ISP Connector Pin Assignments

Pin Number	Signal Name	Signal Name	Pin Number
1	TCK	GND	2
3	TDO	V3V	4
5	TMS	nc	6
7	nc	nc	8
9	TDI	GND	10

Logic Analyzer Connectors

Table A-6, “Logic Analyzer Connectors Summary,” presents suggested vendor part numbers for the optional logic analyzer connectors. They are NOT factory installed. Tables of the pinouts then follow.

Table A-6: Logic Analyzer Connectors Summary

Location	Link	Organization	Description	Samtec Part Number
P5	“P5 - Control,” on page 74	2 x 12	Control	TSW-112-23-L-D
P6	“P6 - Data,” on page 75	2 x 17	+LD[0:31]	TSW-117-23-L-D
P7	“P7 - Address,” on page 74	2 x 17	+LA[0:31]	TSW-117-23-L-D
P8	“P8 - Clock,” on page 75	2 x 1	Clock	TSW-102-23-L-S

P5 - Control

Table A-7: P5 - Control Connector Pin Assignments

Pin Number	Signal Name	Signal Name	Pin Number
1	-QCS0	-RESETS	2
3	-QCS1	+HOLD	4
5	-QCS2	+HOLDA	6
7	-RAS3	-PADS	8
9	-RAS4	-READY	10
11	-QCS5	-PREAD	12
13	-QCS6	-WAIT	14
15	-QCS7	-LBE0	16
17	-QAS	-LBE1	18
19	-QDSAK0	-LBE2	20
21	-QDSAK1	-LBE3	22
23	-QWRITE	+S0	24

P7 - Address

Table A-8: P7 - Address Connector Pin Assignments

Pin Number	Signal Name	Signal Name	Pin Number
1	+LA00	+LA16	34
2	+LA01	+LA17	33
3	+LA02	+LA18	32
4	+LA03	+LA19	31
5	+LA04	+LA20	30
6	+LA05	+LA21	29
7	+LA06	+LA22	28
8	+LA07	+LA23	27
9	+LA08	+LA24	26
10	+LA09	+LA25	25
11	+LA10	+LA26	24
12	+LA11	+LA27	23
13	+LA12	+LA28	22
14	+LA13	+LA29	21
15	+LA14	+LA30	20
16	+LA15	+LA31	19
17	GND	GND	18

P6 - Data

Table A-9: P6 - Data Connector Pin Assignments

Pin Number	Signal Name	Signal Name	Pin Number
1	+LD00	+LD16	34
2	+LD01	+LD17	33
3	+LD02	+LD18	32
4	+LD03	+LD19	31
5	+LD04	+LD20	30
6	+LD05	+LD21	29
7	+LD06	+LD22	28
8	+LD07	+LD23	27
9	+LD08	+LD24	26
10	+LD09	+LD25	25
11	+LD10	+LD26	24
12	+LD11	+LD27	23
13	+LD12	+LD28	22
14	+LD13	+LD29	21
15	+LD14	+LD30	20
16	+LD15	+LD31	19
17	GND	GND	18

P8 - Clock

Table A-10: P8 - Clock Connector Pin Assignments

Pin Number	Signal Name
1	QCLK
2	GND

Appendix

B

Register Value Changes for SRAM

Overview

This appendix presents recommended register settings for the following SRAM registers, as shown in Table B-1, “SRAM Registers,” below.

Table B-1: SRAM Registers

Register				Link
GMR	0004.1040h	32	0x00000000	“Global Memory Register (GMR),” on page 78
BR1	0004.1060h	32	0x00400001	“Base Register 1 (BR1),” on page 78
OR1	0004.1064h	32	0x2fe00000	“Option Register 1 (OR1),” on page 79
BR2	0004.1070h	32	0x00600001	“Base Register 2 (BR2),” on page 79
OR2	0004.1074h	32	0x2fe00000	“Option Register 2 (OR2),” on page 80

Global Memory Register (GMR)

Table B-2: Global Memory Register (GMR) Settings

Bit Position	Field	Recommended Setting	Description
31-24	RCNT7-RCNT0	0000.0000	Leave refresh counter period at default value of all zeroes since DRAM is not used
23	RFEN	0	DRAM refresh is disabled
22-21	RCYC1-RCYC0	00	Leave refresh cycle length at default value of all zeroes since DRAM is not used
20-18	PGS2-PGS0	0.00	Leave page size at default value of all zeroes since DRAM is not used
17-16	DPS1-DPS0	00	Leave DRAM port size at default value of all zeroes since DRAM is not used
15	WBT40	0	Wait between transfers -!RAS negated for four phases (not applicable)
14	WBTQ	0	Wait between transfers -!RAS negated for four phases (not applicable)
13	SYNC	0	Asynchronous memory controller
12	EMWS	0	No external master wait state
11	OPAR	0	Even parity
10	PBEE	0	Disable parity bus error
9	TSS40	0	Do not sample !TS
8	NCS	0	Assert !CS on CPU space accesses
7	DWQ	0	DRAM read/write same length (not applicable)
6	DW40	0	DRAM read/write same length (not applicable)
5	GAMX	0	Disable internal address multiplexing for DRAM
4-0	reserved	0	---

Base Register 1 (BR1)

Table B-3: Base Register 1 (BR1) Settings

Bit Position	Field	Recommended Setting	Description
31-11	BA31-BA11	0000.0000.0100 .0000.0000.0	First SRAM bank begins at 0x0040.0000
10-7	FC3-FC0	000.0	Function codes = 0000
6	TRLXQ	0	Do not relax timing
5	BACK40	0	Do not acknowledge burst
4	CSNT40	0	!CS negated normally
3	CSNTQ	1	!CS negated half clock early
2	PAREN	0	Parity checking is disabled
1	WP	0	Both read and write accesses allowed
0	V	1	This bank is valid

Option Register 1 (OR1)

Table B-4: Option Register 1 (OR1) Settings

Bit Position	Field	Recommended Setting	Description
31-28	TCYC3-TCYC0	0010	One SRAM wait state (TCYC = 2)
27-11	AM27-AM11	1111.1110.0000.0000.0000.0	Address mask – 2 Megabyte window
10-7	FCM3-FCM0	0000	Ignore function codes
6-5	BCYC1-BCYC0	00	Burst length cycle (not applicable)
4	reserved	0	---
3	PGME	0	Page mode disabled (not applicable)
2-1	SPS1-SPS0	00	SRAM port size is 32 bits
0	DSSEL	0	SRAM bank

Base Register 2 (BR2)

Table B-5: Base Register 2 (BR2) Settings

Bit Position	Field	Recommended Setting	Description
31-11	BA31-BA11	0000.0000.0110.0000.0000.0	Second SRAM bank begins at 0x0060.0000
10-7	FC3-FC0	000.0	Function codes = 0000
6	TRLXQ	0	Do not relax timing
5	BACK40	0	Do not acknowledge burst
4	CSNT40	0	!CS negated normally
3	CSNTQ	1	!CS negated half clock early
2	PAREN	0	Parity checking is disabled
1	WP	0	Both read and write accesses allowed
0	V	1	This bank is valid

Option Register 2 (OR2)

Table B-6: Option Register 2 (OR2) Settings

Bit Position	Field	Recommended Setting	Description
31-28	TCYC3-TCYC0	0010	One SRAM wait state (TCYC = 2)
27-11	AM27-AM11	1111.1110.0000. 0000.0000.0	Address mask – 2 Megabyte window
10-7	FCM3-FCM0	0000	Ignore function codes
6-5	BCYC1-BCYC0	00	Burst length cycle (not applicable)
4	reserved	0	---
3	PGME	0	Page mode disabled (not applicable)
2-1	SPS1-SPS0	00	SRAM port size is 32 bits
0	DSSEL	0	SRAM bank

Appendix

C

Agency Approvals

Overview

This appendix presents agency approval and certification information for the PCI334A Universal I/O 32-bit Quad Serial Communications Controller.

The PCI334A is certified as indicated in the following sections. If a certification is not listed below, the PCI334A may still comply. Contact Performance Technologies for current product certifications and availability.

Topics covered in this chapter include:

- “CE Certification,” on page 82
- “Shielded Cable Notice,” on page 82
- “FCC (USA) Class A Notice,” on page 82
- “Industry Canada Class A Notice,” on page 83
- “Safety Information,” on page 83
- “Compliance with RoHS and WEEE Directives,” on page 84

CE Certification

The product(s) described in this manual conform to the *EU 89/336/EEC Electromagnetic Compatibility Directive*, amended by *92/31/EEC* and *93/68/EEC*, and the *EU 72/23/EEC Low Voltage Directive*, amended by *93/68/EEC*.

The product described in this manual is the **PCI334A**. The product identified above complies with the *EU 89/336/EEC Electromagnetic Compatibility Directive* and the *EU 72/23/EEC Low Voltage Directive* by meeting the applicable EU standards as outlined in the Declaration of Conformance. The Declaration of Conformance is available from Performance Technologies, or from your authorized distributor.

ETSI EN 300 386 (V.1.2.1 2000)

Electromagnetic Compatibility and Radio Spectrum Matters (ERM); Telecommunications Network Equipment; Electromagnetic Compatibility (EMC) Requirements.

EN60950-1:2001 and UL60950-1

Recognized component, Standard for Safety of Information, Technology Equipment, including Electrical Business Equipment.

Shielded Cable Notice

In order to comply with the *EU 89/336/EEC Electromagnetic Compatibility Directive*, shielded cables must be used with these products.

FCC (USA) Class A Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

Note: *Modifications made to this device that are not approved by Performance Technologies, Inc. may void the authority granted to the user by the FCC to operate this equipment.*

Industry Canada Class A Notice

This Class A digital apparatus complies with Industry Canada's Equipment Standard for Digital Equipment (ICES-003).

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

Safety Information

This section is provided as a summary of the safety recommendations throughout this manual. Performance Technologies, Incorporated (PTI) recommends that all safety precautions are followed to prevent harm to yourself or the equipment. Please follow all warnings marked on the equipment.

Safety Precautions

Caution:
Follow all warnings and instructions marked on the equipment.

Caution:
Ensure that the voltage and frequency of your power source matches the voltage and frequency inscribed on the equipment's electrical rating label.

Caution:
Never push objects of any kind through the openings in the equipment. Dangerous voltages may be present. Conductive foreign objects could produce a short circuit that could cause fire, electrical shock, or damage your equipment.

Caution:
Electronic components on printed circuit boards are extremely sensitive to static electricity.

Ordinary amounts of static electricity generated by your clothing or work environment can damage the electronic equipment. It is recommended that anti-static ground straps and anti-static mats are used when installing the board in a system to help prevent damage due to electrostatic discharge.

Compliance with RoHS and WEEE Directives

In February 2003, the European Union issued *Directive 2002/95/EC* regarding the Restriction of the use of certain Hazardous Substances in electrical and electronic equipment (RoHS) and *Directive 2002/96/EC* on Waste Electrical and Electronic Equipment (WEEE).

This product is compliant with *Directive 2002/95/EC*. It may also fall under the *Directive 2002/96/EC*.

Performance Technologies' complete position statements on the RoHS and WEEE Directives can be viewed on the Web at: http://pt.com/page/about-us/ehsms/.

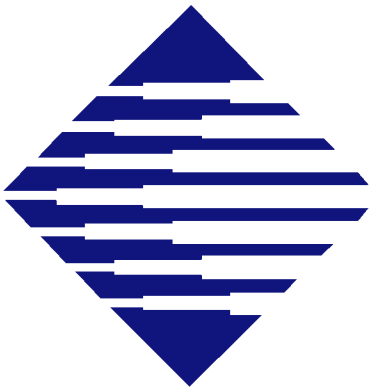

Index

A

addressing for endian conversion 36
altera ISP connector pinouts 73

B

base register 1 (BR1) settings 78
base register 2 (BR2) settings 79
BDM connector 73
BDM port, optional 35
block diagram 30
board configuration register 50
boot flash 17
burn-in mode bit 48

C

cabling 27
Canada Class A notice 83
CE certification 82
clock steering 42
connector pin assignments
  EIA530 63
  RS232C 58
  RS449 60
  V.35 66
console connector 17
customer support and services 12

D

doorbell registers 36

E

EIA530
  cabling 63
  connector pin assignments 63
electrical interface bits 50
endian conversion 36

F

FCC (USA) Class A notice 82
flash prom 41

G

global memory register (GMR) settings 78

H

hard reset 35

I

installation 25
interrupt 7 bit 48

J

J1 - 80-pin connector pinouts 72
jumpers 25

L

LED disable bit 49

line drivers and receivers 41
- RS232C 41
- RS422 (EIA530 or RS449) 42
- V.35 42

local bus arbitration priority 40

logic analyzer connections, optional 43

logic analyzer connectors 27

M

mailbox registers 37

mechanical form factor bit 50

memory 17

miscellaneous register 49

O

option clock 25, 42

option register 1 (OR1) settings 79

option register 2 (OR2) settings 80

oscillator 17

P

P1 - debug port pinouts 73

P2 - BDM connector pinouts 73

P4 - PCI connector pinouts 70

P5 - control connector pinouts 74

P6 - data connector pinouts 75

P7 - address connector pinouts 74

P8 - clock connector pinouts 75

part numbers 16

PCI
- interrupt register 48
- interrupt requests 40
- registers 36
- speed 17
- user in bit 49
- user out bit 48

PCI interface 17, 35
- modes of operation 39
  - direct master 39
  - direct slave 39
  - DMA operation 39
  - PCI user in/out 39
- PCI9056 setup 36

PCI to QUICC interrupt requests 40

PCI334/PCI334A differences 18

PCI334A
- cabling 27
- configuration 24
- installation 25
- jumpers 25
- photograph 18
- product summary 17

PCI9056
- local configuration register addresses 37
- local DMA register addresses 38
- PCI configuration register addresses 37
- shared run time register addresses 38

pinouts
- altera ISP connector 73
- J1 connector 72
- P1 - debug connector 73
- P2 - BDM connector 73
- P4 - PCI connector 70
- P5 - control connector 74
- P6 - data connector 75
- P7 - address connector 74
- P8 - clock connector 75

power
- considerations, +3.3V 31
- considerations, +5V 31
- consumption 31
- supply 17

presence detect bits 47

processor 17

product warranty 13

programmable logic 17

prom write enable bit 51

prom write enable register 51

Q

QUICC
- device address map 31
- interrupt register 48
- interrupt source map 34
- interrupts 34
- port A configuration settings 54
- port A pin mapping (16-bit) 54
- port B configuration settings 55

port B pin mapping (18-bit) 55
port C configuration settings 56
port C pin mapping (12-bit) 56
register addresses 33
register setup 33
setup 31
timer modules 35

R

RCSL register 46

receive clock select bit 46

register value changes for SRAM 77

reset 17, 35
hard 35
soft 35

return merchandise authorization (RMA) 13

revision ID bits 50

RoHS compliance 84

RS232C
cabling 58
connector pin assignments 58
data rate 17

RS422 17

RS449
cabling 60
connector pin assignments 60

S

safety information 83

safety precautions 83

shielded cable notice 82

SIMM size 47

SIMM speeds 47

soft reset 35

software ID 18, 51

SRAM array 41
parity 41
timing 41

status register 47

T

TCSL (transmit clock select) 46

text conventions 12

transmit clock select bit 46

V

V.35 17
cabling 66
connector pin assignments 66

VIO 17

W

warranty, product 13

watchdog time-out 35

WEEE compliance 84